

A Tutorial in Coherent and Windowed Sampling with A/D Converters

**Introduction**

The primary application of coherent sampling is sine wave testing of A/D converters. If the proper ratios between  $f_{IN}$  and  $f_S$  are observed, the need for windowing is eliminated. This greatly increases the spectral resolution of a FFT and creates an ideal environment for critically evaluating the spectral response of the A/D converter. Care must be taken, however, to insure the spectral purity and stability of  $f_{IN}$  and  $f_S$  in the testing environment. Figure 1 illustrates this procedure.

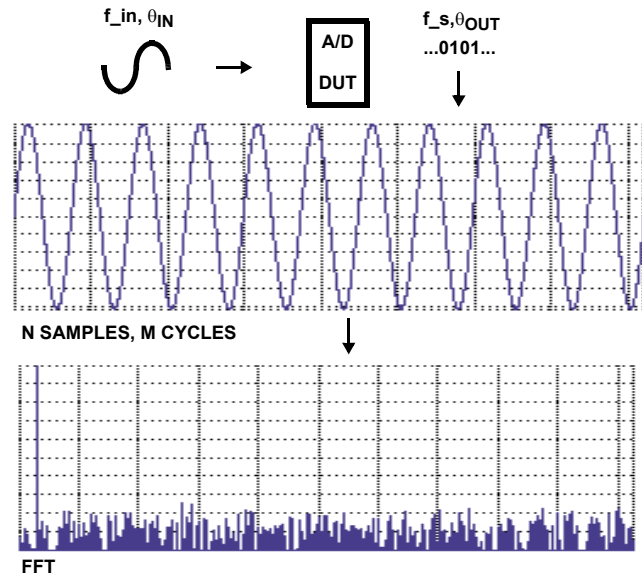


FIGURE 1. TESTING SYSTEM FOR SINEWAVE ANALYSIS

**Definition of Coherence**

Coherent Sampling of a periodic waveform occurs when an integer number of cycles exist in the sample window. In other words, coherent sampling occurs when the relationship of Equation 1 is rational.

$$\frac{f_{IN}}{f_S} = \frac{M}{N} \tag{EQ. 1}$$

Where:

- $f_S$  is the sampling frequency
- $f_{IN}$  is the input frequency
- M is the integer number of cycles in the data record
- N is the integer, factor of 2, number of samples in the record

**Ideal Parameters for Coherence**

The coherence relationship will work for any arbitrary M and N, but practical values provide better results. A prudent choice for N is a power of 2. The FFT requires the number of samples to be a power of 2 because of its inherent periodicity. The DFT can be performed on an arbitrary sample size, but requires more computation time. M should be odd or prime. By making M odd, we eliminate many common factors with N. A prime M eliminates all common

factors with N. Common factors between M and N lead to different harmonics of  $f_{IN}$  having the same frequency bin in the FFT after aliasing. The uniqueness of M is absolutely imperative to Harmonic Distortion calculations.

What follows is a mathematical analysis defining a simple rule that evaluates true when two harmonics have equivalent bins in the FFT. Equation 2 represents the location,  $M_h$ , in a FFT, of a harmonic h.

$$M_h = \begin{cases} \left\lfloor h - N \times \text{INT} \left( \frac{h + \frac{N}{2}}{N} \right) \right\rfloor, & h \neq \frac{N}{2} \\ 0, & h = \frac{N}{2} \end{cases} \tag{EQ. 2}$$

Suppose harmonic 1 and harmonic 2 have the same FFT bin locations,  $M_{h1} = M_{h2} = M_h$ , then, from Equation 2,

$$M_h = \begin{cases} \left\lfloor h_1 - N \times \text{INT} \left( \frac{h_1 + \frac{N}{2}}{N} \right) \right\rfloor = \left\lfloor h_2 - N \times \text{INT} \left( \frac{h_2 + \frac{N}{2}}{N} \right) \right\rfloor, & h_1 = h_2 \neq \frac{N}{2} \\ 0, & h_1 = h_2 = \frac{N}{2} \end{cases} \tag{EQ. 3}$$

Consider that  $h_1$ ,  $h_2$ , and N will always be positive values. Simplifying Equation 3 results in Equation 4.

$$\frac{(h_1 \pm h_2)}{N} = \text{INT} \left( \frac{h_1 + \frac{N}{2}}{N} \right) \pm \text{INT} \left( \frac{h_2 + \frac{N}{2}}{N} \right) \tag{EQ. 4}$$

Since the right side of Equation 4 must necessarily be an integer, the left side must also be an integer when the two harmonic locations  $M_{h1}$  and  $M_{h2}$  are equal.

$$M_{h1} = M_{h2} \Leftrightarrow \frac{(h_1 \pm h_2)}{N} = \text{INT} \tag{EQ. 5}$$

Therefore, when Equation 5 is true, the frequency bin of harmonic 1 is equal to the frequency bin of harmonic 2. The FFT provides N/2 frequency bins. To insure the uniqueness of each harmonic of the fundamental frequency bin, Equation 5 must be false for all combinations of  $h_1$  and  $h_2$  for all multiples of M extending to N.

Sampling at the Nyquist rate of  $f_S = 2 \times f_{IN}$  is a classic problem. As an example, consider  $N = 4096$ ,  $f_{IN} = f_S/2$ ,  $M = N/2$ . Equation 5 evaluates as  $((h_1 \pm h_2)/4096) = \text{INT}$ . If we substitute  $h = x \times M$  for  $h_1$  and  $h_2$  where x represents the harmonic number, then the equation can be simplified to  $((x_1 \pm x_2)/2) = \text{INT}$ . Whenever this equation holds true, the two harmonics have the same frequency bin. In this case, every odd harmonic will have the same bin as the fundamental and every even harmonic will have the same bin as DC. Therefore, no information about harmonic distortion or signal to noise ratio can be calculated.

### Non-Ideal Parameters for Coherence

Thus far, we have talked about the complexities involved in coherent sampling that usually involve tedious iterative calculations to get the correct sampling ratio. That process ultimately resolves a very accurate solution. When the integer relationship of Equation 1 is not observed, artifacts result in the FFT spectrum.

Figure 2 is a 4096 point sample record from an ideal 10-bit A/D converter. To illustrate how the FFT interprets the 4096 points of data, the same 4096 point data record has been shifted in time by 4096 points and copied onto the graph. The FFT assumes that the 4096 data points represent a periodic waveform that extends to infinity in both directions. Because of this assumed periodicity, the calculation time of the FFT is reduced significantly and a smaller number of samples is required. Observe Figure 3. The waveform has been mirrored in the same way as Figure 1, except the record now contains 1.1 cycles instead of the original 1.0 cycles of Figure 1. It is obvious that if this is to be the signal that we perform the FFT on, the results will be degraded.

The characteristics of non-coherent sampling are obvious for gross errors, but are illusive with smaller error. Figure 4 is the FFT spectrum of a coherently sampled ideal 10-bit A/D converter. Notice there is no significant activity below -80db and the harmonic components are virtually nonexistent. Conversely, adjusting the coherence relationship to reflect a change in M of as little as 0.005, the harmonic components are significantly increased, and a unique condition called spreading occurs. Spreading, sometimes referred to as smearing or leakage, causes a spike centered around the frequency bin of the fundamental. The width of the spike is an indication of the magnitude of non-coherence. A concept crucial to understanding the nature of the problem is interpreting what a 0.005 change in M really means with respect to  $f_{IN}$  and  $f_S$ . If N and  $f_S$  stay constant, and M is increased by 0.005, then the input frequency,  $f_{IN}$ , is increased by  $f_S/N * 0.005$  causing leakage in the time domain window that leads to non-coherence.

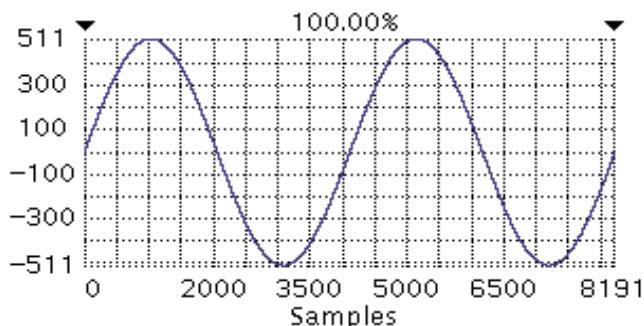


FIGURE 2. TRANSIENT RESPONSE OF A COHERENTLY SAMPLED DATASET AS SEEN BY FFT

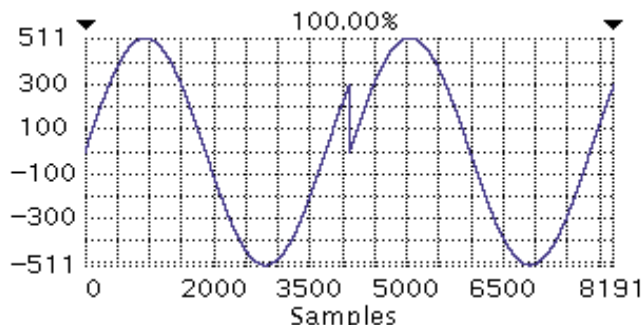


FIGURE 3. TRANSIENT RESPONSE OF A NON-COHERENTLY SAMPLED DATASET AS SEEN BY FFT

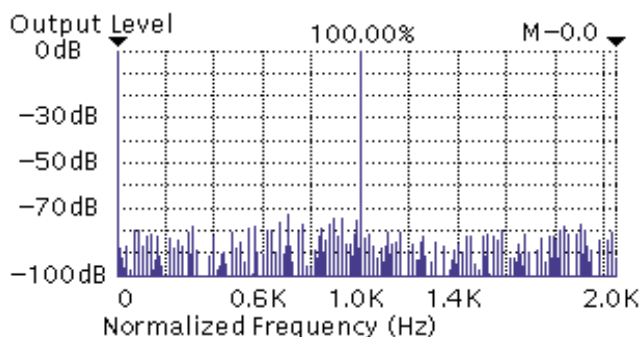


FIGURE 4. FFT SPECTRUM OF A COHERENTLY SAMPLED WAVEFORM

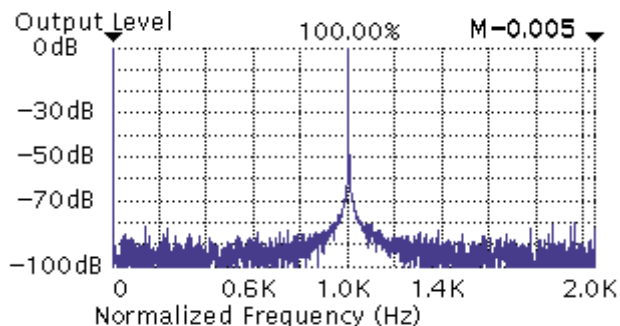


FIGURE 5. FFT SPECTRUM OF A NON-COHERENTLY SAMPLED WAVEFORM

An important specification for A/D testing is ENOB, or Effective Number of Bits. Figure 6 shows the effect on ENOB performance of a shift in M from M-0.5 to M+0.5. Since the data is based on an Ideal converter, we expect to be able to achieve 10-bit accuracy. Indeed, there is a region where 10 bits is achievable, but it is very slim. The acuity of this region highlights why coherence must be accurately observed. Although, Figure 6 is somewhat misleading. Assuming the input frequency was 10MHz, the range of Figure 6 would represent an input frequency range from 9995117Hz to 10004883Hz. In most instances, high frequency equipment will perform within 1Hz of the programmed value resulting in a range of  $\pm 0.5$ Hz or a variability in M of  $\pm 0.00005$  for our high-frequency example. Further narrowing in on the ideal range of variability for M, Figure 7 shows the change in ENOB for a change in M of  $\pm 0.0005$ . The assumed accuracy of our high-frequency source puts it within the 9.95 - 10.0 bit range for an ideal signal.

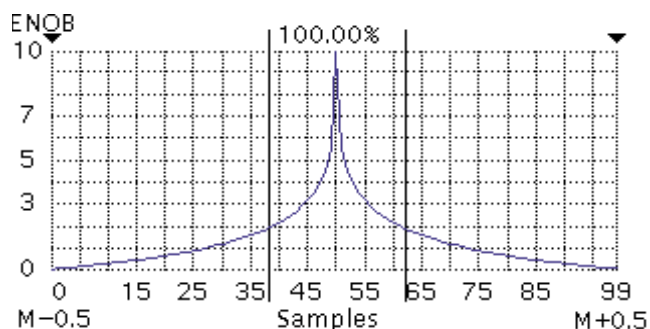


FIGURE 6. ENOB vs M FOR M-0.5 TO M+0.5

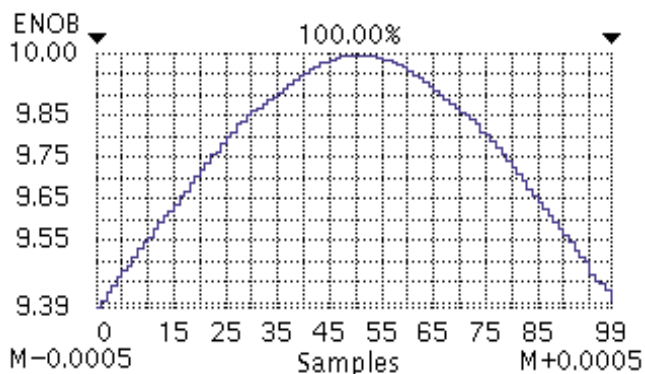


FIGURE 7. ENOB vs M FOR M-0.0005 TO M+0.0005

### Unwrapping

A coherently sampled sine wave can be reassembled using a concept called unwrapping. Figure 8 shows a sinewave with M = 11 sampled N = 4096 times. Figure 9 is the same waveform after unwrapping is applied. If a waveform has been coherently sampled, the unwrapped waveform should look like one cycle sampled N times.

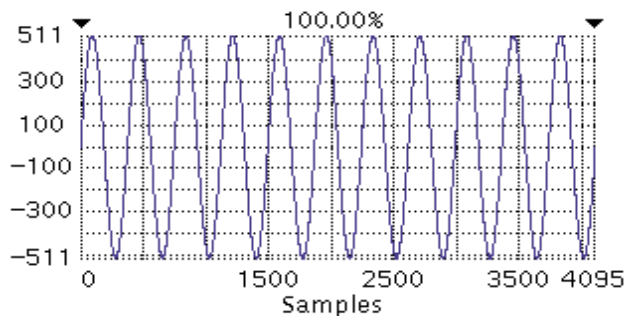


FIGURE 8. COHERENTLY SAMPLED WAVEFORM FOR M = 11

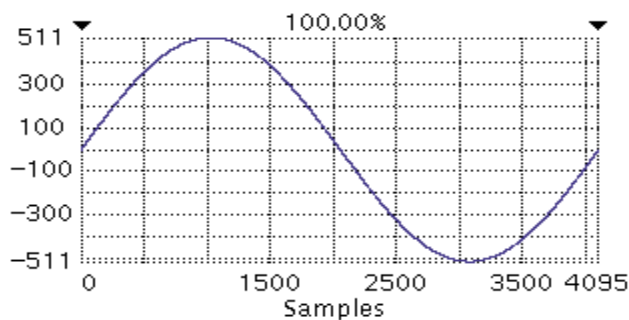


FIGURE 9. COHERENTLY SAMPLED WAVEFORM AFTER UNWRAP FOR M = 11

### Windowing

Leakage is not a problem in all cases. It does not affect transient data as long as the transient occurrence is fully contained within the sample window. Leakage only occurs when the FFT is used to extrapolate frequency information from the sampled waveform. The actual source of leakage is not the signal itself but the window used in acquisition. The amount of leakage depends on the window shape and how the signal fits into the window.

Consider the coherently sampled waveform of Figure 12. The window of acquisition is rectangular and precisely set so that an integer number of cycles are captured. Therefore, leakage does not occur, the noise floor is nearly ideal for a 10 bit device, and harmonic distortion is nonexistent. In many cases the signal or sampling variables can not be precisely controlled. This makes it difficult to obtain exactly an integer number of cycles. But, leakage can be avoided or controlled by modifying the window to fit the data or to modify the data to a better form.

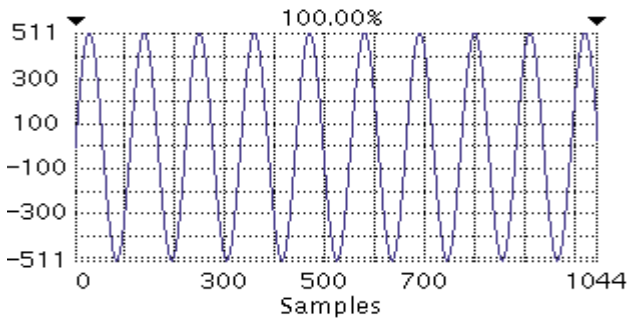


FIGURE 10. 9.5 CYCLE SINE WAVE

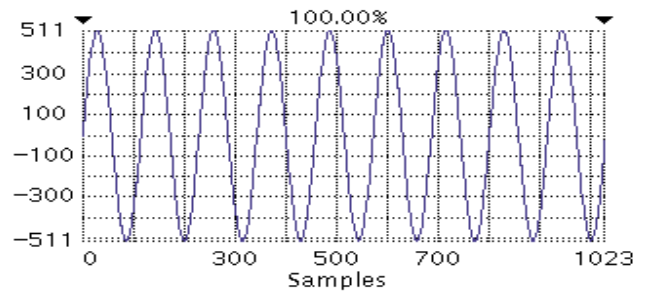


FIGURE 12. COHERENT 9.0 CYCLE SINE WAVE

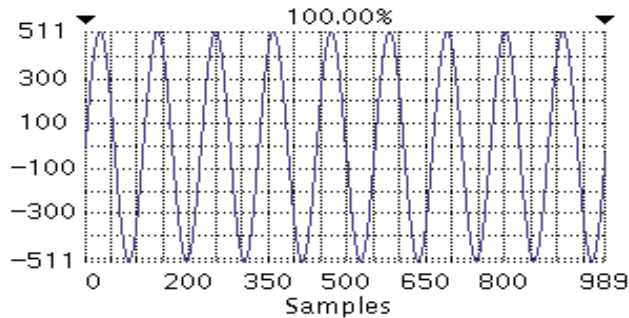


FIGURE 11. 9.0 CYCLE SINE WAVE

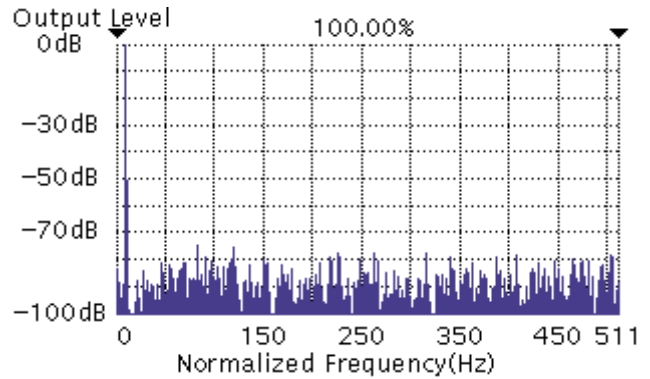


FIGURE 13. FFT OF COHERENT 9.0 CYCLE SINE WAVE

### Resampling and Interpolative Resampling

For example, if 9.5 cycles of a waveform are captured, the data window can be shortened to disregard the extra 0.5 cycle. Assuming the original data set is 1045 samples long, as in Figure 10, after discarding the extra 0.5 cycle, the data set is reduced to 990 samples as illustrated by Figure 11. A 990 point DFT can now be performed on the modified data to produce accurate results free of leakage. This presents a problem to FFT algorithms that are limited to power of 2 sample sets. There is, however, a solution. The new sample set can be resampled to fit a given sample size or interpolation techniques can be applied to fit the waveform into the appropriately sized sample set. The 9.0 cycle waveform of Figure 11 was resampled to provide 1024 samples. Figure 15 shows the affects of the linear resampling in the frequency domain. Figure 14 is a similar example except the data has been resampled using linear interpolation. Linear resampling preserves the levels of the original data and avoids leakage, but does produce a more discontinuous waveform leading to harmonic distortion. Linear interpolative resampling circumvents this problem but does not entirely preserve the original data. Figure 12 is provided as a reference.

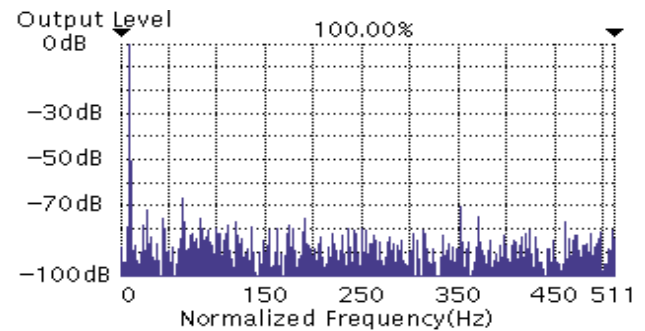


FIGURE 14. FFT OF FIGURE 11 AFTER INTERPOLATION

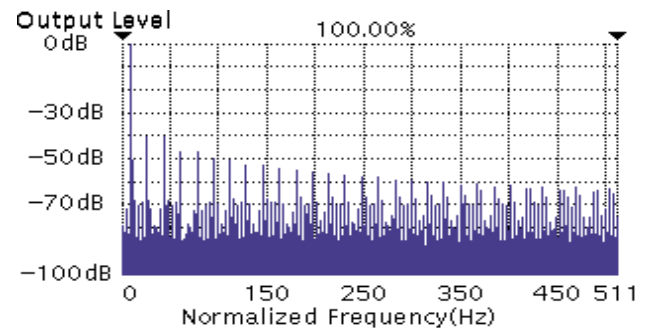


FIGURE 15. FFT OF FIGURE 11 AFTER RESAMPLING

### Different Window Shapes

Since almost periodic data does not have a definable period, the above techniques are not applicable. Windowing the data can however force the data to begin and end at the same or nearly the same level. The technique of mathematical windowing is accomplished by multiplying the sampled waveform by an appropriate function. This prevents discontinuity at the window edge. Eliminating the discontinuity does not always eliminate leakage, but it helps to reduce it.

Several functions taper at the window edges. These are shown in Table 1. The first column is the actual window which should be applied to the sampled signal. The second column defines the shape equation for each window. As a basis for comparison, the third column contains the normalized frequency domain magnitude for each window. The fourth column lists the peak magnitude in the frequency domain as compared to that of the rectangular window. The decreased major lobe magnitude is due to the addressed area (energy) of each window as compared to the rectangular window. Adjusting the amplitude of the window will accommodate this difference. The fifth column lists the amplitude of the highest side-lobe in decibels referenced to the major lobe peak.

The 3dB bandwidth of the major lobe is given in the sixth column. These bandwidth values are normalized to Beta, the reciprocal of the window's time duration. The last column of parameters lists the theoretical rate of decay (roll-off) of the side lobes.

In choosing a windowing function, the bandwidth and side lobe levels should be considered. In general, the lower the side lobes, the less leakage in the frequency domain of the windowed data. However, lowering the side lobes also results in more energy being concentrated in widening the major lobe. Figures 17 and 18 illustrate these qualities. The Extended Cosine Bell has a very narrow major lobe and very high side lobes whereas the Parzen window has very low side lobes but a wide major lobe. Figure 16 is provided as a reference. Table 1 lists the windows in order of decreasing side lobe level and as a result they are listed in order of increasing bandwidth. The exception is the Hamming because of its non-zero edges.

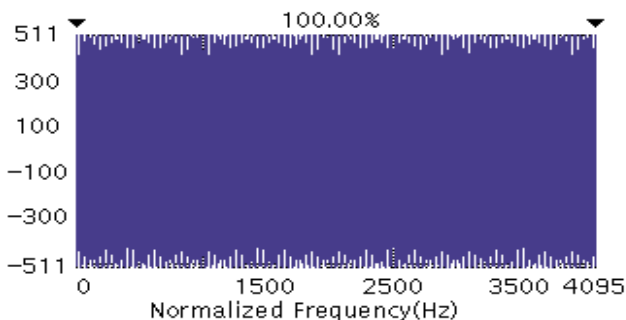


FIGURE 16A. RECTANGULAR WINDOWED SINE WAVE

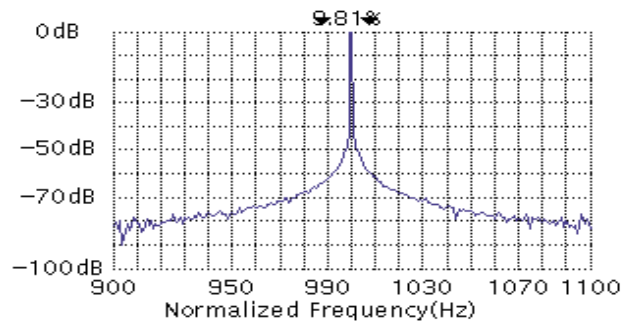


FIGURE 16B. FFT SPECTRUM OF RECTANGULAR WINDOWED SINE WAVE

In terms of spectral separation, the greater the window's bandwidth, the less selectivity it provides for equal amplitude and adjacent frequencies. The wide bandwidth causes them to blur together. Alternatively, lower side lobe levels increases selectivity between adjacent components of unequal amplitudes since the lower magnitude components are no longer buried in the leakage skirts. Usually, it takes a lot of trial and error before the correct window function is selected. Figures 19 through 22 provide some insight into the trial and error pitfalls involved in selecting the correct window shape. In Figure 21, the large side lobes of the Extended Cosine Bell window overshadow the original signals apparent in Figure 19. Conversely, the wide major lobes of the Parzen Window absorb one and another as is evident by Figure 22. A compromise can be arrived at by using the Hanning shape. The FFT spectrum of Figure 20 has reduced leakage to a minimum while continuing to preserve spectral separation of the signals.

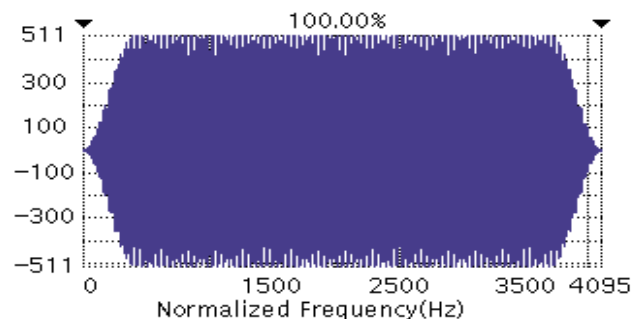


FIGURE 17A. EXTENDED COSINE BELL WINDOWED SINE WAVE

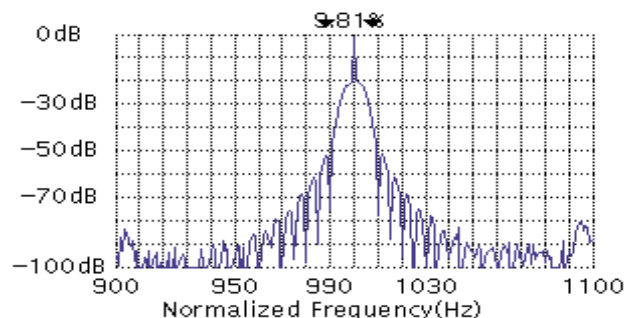


FIGURE 17B. FFT OF EXTENDED COSINE BELL WINDOWED SINE WAVE

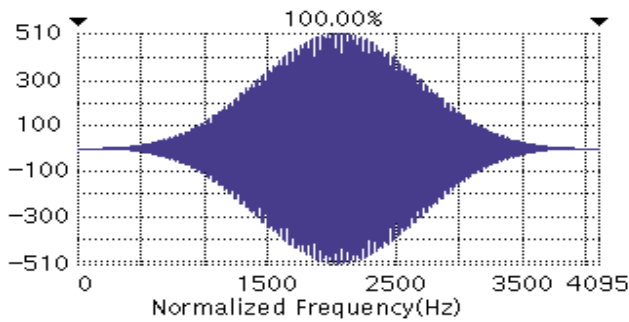


FIGURE 18A. PARZEN WINDOWED SINEWAVE

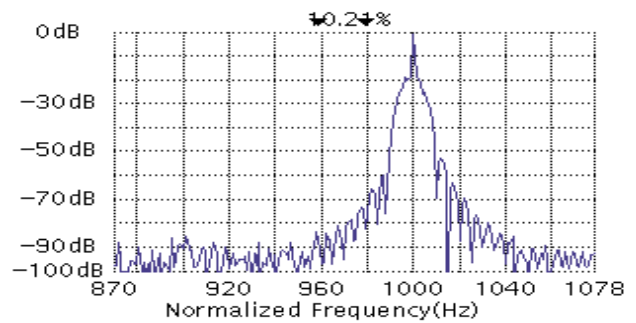


FIGURE 21. FFT OF WAVEFORM OF FIGURE 18 WINDOWED WITH AN EXTENDED COSINE BELL SHAPE

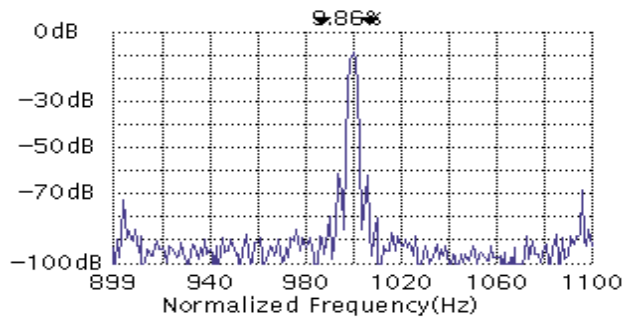


FIGURE 18B. FFT SPECTRUM OF PARZEN WINDOWED SINEWAVE

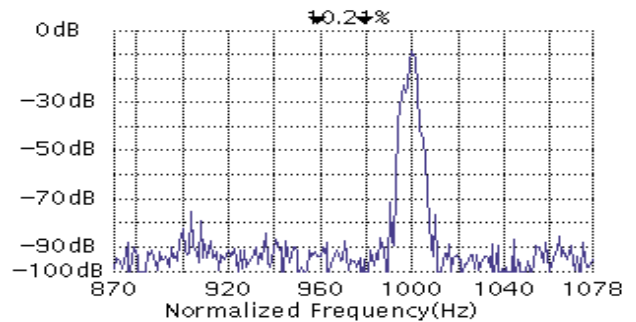


FIGURE 22. FFT OF WAVEFORM OF FIGURE 18 WINDOWED WITH A PARZEN SHAPE

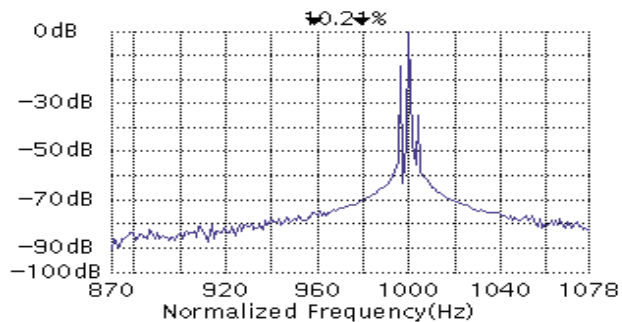


FIGURE 19. FFT OF A 3-SIGNAL NON-COHERENT WAVEFORM






















FIGURE 20. FFT OF WAVEFORM OF FIGURE 18 WINDOWED WITH A HANNING SHAPE

### Conclusion

Coherent testing of A/D converters provides an ideal environment for evaluating the spectral response. The rules for coherent sampling are simple.  $M$  must be prime or odd.  $N$  must be a factor of 2. The sampling and input frequency and phase must be stable and predictable. There are two methods for evaluating coherence. Unwrapping the waveform will show non-coherent anomalies in the time domain. The algorithm for unwrapping is provided below. Another indication of noncoherence is leakage skirting, or spreading, in the FFT spectrum. In the case of a single tone, sine wave curve fitting can be used to calculate signal to noise ratio. When the rules of coherent testing are not observed, windowing may be applied to try and resolve spectral components.

When should windowing be used, and when should it not? If windowing is needed, which windowing function should be used? The answer to these questions depend upon what you are looking for. If a waveform has adjacent components of nearly equal magnitude, you may want to leave the data in the rectangular window. The increased major lobe width of another window shape may cause the two adjacent components to leak into each other and appear as one. On the other hand, if there is a small component near a large component, a low side-lobe window will decrease leakage around the large component and make the small component easier to distinguish. Ultimately, selecting the window is a compromise between needed side-lobe reduction and a tolerable increase in major lobe width.

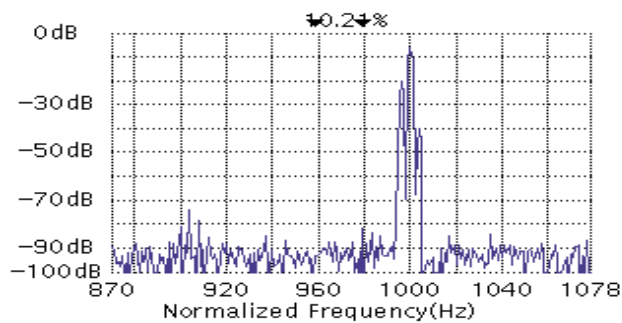TABLE 1. WINDOWING FUNCTIONS

UNITY AMPLITUDE WINDOW	SHAPE EQUATION	FREQUENCY DOMAIN MAGNITUDE	MAJOR LOBE HEIGHT	HIGHEST SIDE LOBE (dB)	BAND-WIDTH (3dB)	THEORETICAL ROLL-OFF
Rectangle 	$A = 1$ for $t = 0$ to $T$		$T$	-13.2	$0.86\beta$	6
Extended Cosine Bell 	$A = 0.5(1 - \cos(2\pi 5t/T))$ for $t = 0$ to $T/10$ and $t = 9T/10$ to $T$ $A = 1$ for $t = T/10$ to $9T/10$		$0.9T$	-13.5	$0.95\beta$	18 Beyond 5B
Half Cycle Sine 	$A = \sin(2\pi 0.5t/T)$ for $t = 0$ to $T$		$0.64T$	-22.4	$1.15\beta$	12
Triangle 	$A = 2t/T$ for $t = 0$ to $T/2$ $A = -2t/T + 2$ for $t = T/2$ to $T$		$0.5T$	-26.7	$1.27\beta$	12
Cosine <sup>2</sup> (Hanning) 	$A = 0.5(1 - \cos(2\pi t/T))$ for $t = 0$ to $T$		$0.5T$	-31.6	$1.39\beta$	18
Half Cycle Sine <sup>3</sup> 	$A = \sin^3(2\pi 0.5t/T)$ for $t = 0$ to $T$		$0.42T$	-39.5	$1.61\beta$	24
Hamming 	$A = 0.08 + 0.46(1 - \cos(2\pi t/T))$ for $t = 0$ to $T$		$0.54T$	-41.9	$1.26\beta$	6 Beyond 5B
Cosine <sup>4</sup> 	$A = (0.5(1 - \cos(2\pi t/T)))^2$ for $t = 0$ to $T$		$0.36T$	-46.9	$1.79\beta$	30
Parzen 	$A = 1 - 6(2t/T - 1)^2 + 6 2t/T - 1 ^3$ for $t = T/4$ to $3T/4$ $A = 2(1 -  2t/T - 1 )^3$ for $t = 0$ to $T/4$ and $t = 3T/4$ to $T$		$0.37T$	-53.2	$1.81\beta$	24

## Algorithms

The coherence algorithm accepts known values for each of the coherence parameters and evaluates the closest value to the initial guess so that all values are integer related. N must be a power of 2 greater than 4. The error is not more than  $\pm(N/2)$  for  $f_s$  and  $\pm(f_s/N)$  for  $f_{in}$ .

The unwrap algorithm accepts two arrays (t<sub>sample</sub> and unwrap) the number of cycles captured (M), and the array length (N). The t<sub>sample</sub> array is the sampled waveform. The unwrap array is the unwrapped waveform. It should look like one cycle of the waveform but sampled N times. The variable M is the number of cycles in the record.

The alias algorithm accepts N and f<sub>bin</sub> as variables and computes the correct FFT bin assignment of f<sub>bin</sub>.

## References

- [1] R.W. Ramirez, *The FFT Fundamentals and Concepts*, 1986, pgs. 140-141.
- [2] M.. Mahoney, *Tutorial DSP-Based Testing of Analog and Mixed-Signal Circuits*, 1987, pgs. 45-58.

```

void coherence(f_in,f_s,N,M)
double *f_in,*f_s;
int N,*M;
{
int K;

    K = (*f_s + N/2)/N;
    *M = (int)(*f_in)/(int)K/2*2+1;
    *f_s = K*N;
    *f_in = K>(*M);
}
/* Sample Call */

/* coherence(&f_in,f_s,N,M); */

}/* End of Coherence Algorithm */

void unwrap_algorithm(tsample,unwrap,size_cap,M)
int tsample[],unwrap[],M,size_cap;
{
int i,j;
for (i=0; i<size_cap;i++)
    {
    j = M*i % size_cap;
    unwrap[j] = tsample[i];
    }
}

/* Sample Call */
/* unwrap_algorithm(tsample,unwrap,size_cap,f_bin); */

}/* End of Unwrap Algorithm */

void alias_algorithm(fbin,N)
int *fbin,N;
{
*fbin=fabs((float) ( *fbin - N *((*fbin+N/2)/N) ));
if (*fbin == N/2) *fbin = 0;

/* Sample Call */
/* alias_algorithm(&fbin,M); */

}/* End of Alias Algorithm */

```



## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.  
Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.  
(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics America Inc.**  
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.  
Tel: +1-408-432-8888, Fax: +1-408-434-5351

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K  
Tel: +44-1628-651-700, Fax: +44-1628-651-804

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852-2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

**Renesas Electronics Korea Co., Ltd.**  
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338