

RL78/G14, R8C/36M Group

R01AN3710EC0100

Migration Guide from R8C to RL78:

Rev.1.00

Timer RF to Timer Array Unit

Aug. 1, 2017

Introduction

This document describes how to migrate from timer RF in R8C/36M group to the timer array unit (TAU) in RL78/G14 (This document is described in 64-pin package as an example.).

Target Device

RL78/G14, R8C/36M Group

When using this application note with other Renesas MCUs, careful evaluation is recommended after making modifications to comply with the alternate MCU.

Contents

1. Migration Method from R8C Family to RL78 Family	4
2. Differences between RL78/G14 and R8C/36M Group	6
2.1 Differences in Function Overview	6
2.2 Differences in Input Capture Mode	7
2.3 Differences in Output Compare Mode	8
2.4 Assigned I/O Pins.....	9
2.5 Register Compatibility	10
3. How to migrate Timer RF in this sample code	12
4. Example of Migration from Input Capture Mode	13
4.1 Specifications.....	13
4.2 Operation Check Conditions.....	14
4.3 Description of Hardware.....	14
4.3.1 Hardware Configuration Example	14
4.3.2 List of Pins to be used.....	15
4.4 Description of Software.....	15
4.4.1 Operation Outline.....	15
4.4.2 List of Option Byte Setting.....	17
4.4.3 List of Constant.....	17
4.4.4 List of Variables	17
4.4.5 List of Functions	18
4.4.6 Function Specification	18
4.4.7 Flow Chart.....	19
5. Example of Migration from Output Compare Mode	32
5.1 Specifications.....	32
5.2 Operation Check Conditions.....	33
5.3 Description of Hardware.....	33
5.3.1 Hardware Configuration Example	33
5.3.2 List of Pins to be used.....	34
5.4 Description of Software.....	34
5.4.1 Operation Outline.....	34
5.4.2 List of Option Byte Setting.....	36
5.4.3 List of Functions	36
5.4.4 Function Specification	36
5.4.5 Flow Chart.....	37
6. Sample Code	55
7. Reference Application Note	55

8. Reference Documents 55

1. Migration Method from R8C Family to RL78 Family

This application note explains how to achieve each mode (input capture mode and output compare mode) in timer RF of R8C/36M using RL78/G14.

Table 1.1 shows the mode in timer RF of R8C/36M group, and Table 1.2 shows the mode in timer array unit of RL78/G14.

In R8C/36M group, timer RF is a 16-bit timer. Timer RF has two modes: input capture mode and output compare mode. In input capture mode, the edge of the TRFI pin input signal is used as a trigger to latch the timer value and the width or the period of external signal is measured. The TRFI input is equipped with a digital filter, and this prevents errors caused by noise or the like from occurring. In output compare mode, when the value of the TRF register matches the value of the TRFM0 (compare 0 match) or TRFM1 (compare 1 match) register, a user-set level is output from the output-compare output pin.

In RL78/G14, the timer array unit has four 16-bit timers. Each 16-bit timer is called a channel and can be used as an independent timer. In addition, two or more "channels" can be used to create a high-accuracy timer. A count clock is counted by the TCR_{mn} register. Set the count value in the TDR_{mn} register.

The same operation as that in input capture mode of R8C/36M can be realized by using input pulse interval measurement function in TAU of RL78/G14. The count value can be captured at the TIM_n valid edge and the interval of the pulse input to TIM_n can be measured. In addition, the count value can be captured by using software operation (TS_{mn} = 1) as a capture trigger while the TEM_n bit is set to 1.

The same operation as that in output compare mode of R8C/36M can be realized by using PWM output function in TAU of RL78/G14. Two channels can be used as a set to generate a pulse of any period and duty factor.

Remark m: Unit number (m = 0, 1), n: Channel number (n = 0 to 3)

Table 1.1 Operation Mode of Timer RF in R8C/36M

Timer RF in R8C/36M	
Mode	Function
Input capture mode	Transfer the counter value to a register as a trigger of the external signal.
Output compare mode	Detect the register value match with a counter (Pin output can be changed at detection).

Table 1.2 Operation Mode of TAU in RL78/G14

TAU in RL78/G14	
Mode	Function
Interval timer	The timer array unit can be used as a reference timer that generates INTTMmn (timer interrupt) at fixed intervals.
Square wave output	TOmn performs a toggle operation as soon as INTTMmn has been generated, and outputs a square wave with a duty factor of 50%.
External event counter	The timer array unit can be used as an external event counter that counts the number of times the valid input edge (external event) is detected in the TImn pin.
Divider	A clock input from a timer input pin (TI00) is divided and output from an output pin (TOm0).
Input pulse interval measurement	The count value can be captured at the TImn valid edge and the interval of the pulse input to TImn can be measured.
Measurement of high-/low-level width of input signal	By starting counting at one edge of the TImn pin input and capturing the number of counts at another edge, the signal width (high-level width/low-level width) of TImn can be measured.
Delay counter	It is possible to start counting down when the valid edge of the TImn pin input is detected (an external event), and then generate INTTMmn (a timer interrupt) after any specified interval.
One-shot pulse output	By using two channels as a set, a one-shot pulse having any delay pulse width can be generated from the signal input to the TImn pin.
PWM output	Two channels can be used as a set to generate a pulse of any period and duty factor.
Multiple PWM output	By extending the PWM function and using multiple slave channels, many PWM waveforms with different duty values can be output.

2. Differences between RL78/G14 and R8C/36M Group

2.1 Differences in Function Overview

Table 2.1 lists the differences between timer RF in R8C/36M group and the TAU in RL78/G14.

Table 2.1 Differences

Item	R8C/36M Group Timer RF	RL78/G14 TAU
Configuration	16-bit timer	16-bit timer ^{Note 1}
Count sources	f1, f2, f32	f _{TCLK} (between f _{CLK} to f _{CLK} /2 ¹⁵)
Counters	• TRF register	TCR _{mn} register
Count value setting	• TRF register	TDR _{mn} register
Modes	<ul style="list-style-type: none"> • Input capture mode • Output compare mode 	<ul style="list-style-type: none"> • Interval timer • Square wave output • External event counter • Divider (channel 0 in unit 0 only) • Input pulse interval measurement • Measurement of high-/low-level width of input signal • Delay counter • one-shot pulse output ^{Note 2} • PWM output ^{Note 2} • Multiple PWM output ^{Note 2}
Count operations	Increment	<ul style="list-style-type: none"> • Count up ^{Note 3} • Count down ^{Note 3}
Timer input	<ul style="list-style-type: none"> • TRFI pin <ul style="list-style-type: none"> - Measured pulse input (Input capture mode) 	<ul style="list-style-type: none"> • Channel 0 <ul style="list-style-type: none"> - Input from the TI00 pin - Event input signal from the ELC • Channel 1 <ul style="list-style-type: none"> - Input from the TI01 pin - Event input signal from the ELC - Low-speed on-chip oscillator clock (f_{IL}) - Subsystem clock (f_{SUB}) • Channel 2 <ul style="list-style-type: none"> - Input from the TI02 pin • Channel 3 <ul style="list-style-type: none"> - Input from the TI03 pin - RxD0 (Serial input pin)
I/O pin selection (output / input port)	Yes	No
Simultaneous channel operation function	No	Yes ^{Note 2}
Coordination with event link controller (ELC)	No	Yes

Notes: 1. Channels 1 and 3 can operate as 8-bit timers.

2. These modes are available by using a master channel to link with slave channels.

3. Count operations depend on modes specified.

2.2 Differences in Input Capture Mode

The input pulse interval measurement in RL78/G14 corresponds to input capture mode in R8C/36M group.

Table 2.2 lists the differences between input capture mode in R8C/36M group and input pulse interval measurement in RL78/G14.

Table 2.2 Differences between Input Capture Mode and Input Pulse Interval Measurement

Item	R8C/36M Group (Input Capture Mode)	RL78/G14 (Input Pulse Interval Measurement)
Count sources	f1, f2, f32	f _{TCLK} (between f _{CLK} to f _{CLK} /2 ¹⁵)
Count operations	<ul style="list-style-type: none"> • Increment • Transfer the value in the TRF register to the TRFM0 register at the valid edge of the measured pulse. 	<ul style="list-style-type: none"> • Timer count register mn (TCRmn) operates as an up counter in the capture mode. • When the channel start trigger bit (TSmn) of timer channel start register m (TSm) is set to 1, the TCRmn register counts up from 0000H in synchronization with the count clock. • When the TImn pin input valid edge is detected, the count value of the TCRmn register is transferred (captured) to timer data register mn (TDRmn) and, at the same time, the TCRmn register is cleared to 0000H.
Overflow period	1/fk × 65536 fk: Frequency of count source	Period of count clock × 65536
Count start condition	The TSTART bit in the TRFCR0 register is set to 1 (count starts).	1 is written to the TSmn bit in the TSm register
Count stop conditions	The TSTART bit in the TRFCR0 register is set to 0 (count stops).	1 is written to the TTmn bit in the TTm register
Interrupt request generation timing	<ul style="list-style-type: none"> • The valid edge of TRFI input [capture interrupt] • When timer RF overflows [timer RF interrupt] 	When the TImn pin input valid edge is detected, INTTMmn is output.
Counter value reset timing	In the following cases, the value in the TRF register is set to 0000h. <ul style="list-style-type: none"> • When the TSTART bit in the TRFCR0 register is set to 0 (count stops). 	When the TImn pin input valid edge is detected, the count value of the TCRmn register is transferred (captured) to timer data register mn (TDRmn) and, at the same time, the TCRmn register is cleared to 0000H.
Read from timer	<ul style="list-style-type: none"> • The count value can be read out by reading the TRF register. • The count value at the measured pulse valid edge input can be read out by reading the TRFM0 register. 	Read the TDRmn and TCRmn registers.
Write to timer	Write to the TRF and TRFM0 registers is disabled.	Write to the TDRmn and TCRmn registers is disabled.
Select functions	<ul style="list-style-type: none"> • TRFI polarity selected • Digital filter function 	<ul style="list-style-type: none"> • Valid edge selected • Noise filter

Remark m: Unit number (m = 0, 1), n: Channel number (n = 0 to 3)

2.3 Differences in Output Compare Mode

Operation as PWM output in RL78/G14 corresponds to Output Compare Mode in R8C/36M group.

Table 2.3 lists the differences between output compare mode in R8C/36M group and operation as PWM output in RL78/G14.

Table 2.3 Differences between Output Compare Mode and Operation as Square Wave Output

Item	R8C/36M Group (Output Compare Mode)	RL78/G14 (PWM Output)
Count sources	f1, f2, f32	f _{CLK} (between f _{CLK} to f _{CLK} /2 ¹⁵)
Count operations	<ul style="list-style-type: none"> Increment 	<p>Two channels can be used as a set to generate a pulse of any period and duty factor.</p> <p>The master channel operates in the interval timer mode.</p> <p>The slave channel operates in one-count mode.</p>
PWM waveform	<p>PWM period: 1/fk × (n+1)</p> <p>"L" level width: 1/fk × (m+1)</p> <p>"H" level width: 1/fk × (n-m)</p> <p>fk: Frequency of count source</p> <p>m: Value set in the TRFM0 register</p> <p>n: Value set in the TRFM1 register</p>	<p>Pulse period = {Set value of TDRmn (master) + 1} × Count clock period</p> <p>Duty factor [%] = {Set value of TDRmp (slave)} / {Set value of TDRmn (master) + 1} × 100</p>
Count start condition	The TSTART bit in the TRFCR0 register is set to 1 (count starts).	1 is written to the TSmn, TSHm1, or TSHm3 bit in the TSm register
Count stop conditions	The TSTART bit in the TRFCR0 register is set to 0 (count stops).	1 is written to the TTmn, TTHm1, or TTHm3 bit in the TTm register
Interrupt request generation timing	<ul style="list-style-type: none"> When compare 0 match is generated [compare 0 interrupt] When compare 1 match is generated [compare 1 interrupt] When time RF overflows [timer RF interrupt] 	<p>Master channel: If the channel start trigger bit (TSmn) of timer channel start register m (TSm) is set to 1, an interrupt (INTTMmn) is output.</p> <p>Slave channel: By using INTTMmn from the master channel as a start trigger, the TCRmp register loads the value of the TDRmp register and the counter counts down to 0000H. When the counter reaches 0000H, it outputs INTTMmp.</p>
Output pin functions	Programmable I/O port or output-compare output	Programmable I/O port or PWM function output
Read from timer	<ul style="list-style-type: none"> The count value can be read out by reading the TRF register. The value in the compare register can be read out by reading registers TRFM0 and TRFM1. 	Read the registers TCRmn and TCRmp
Write to timer	Write to the TRF register is disabled	Write to the register TDRmn and TDRmp
Selectable functions	<ul style="list-style-type: none"> Output-compare output pin selected Output level at the compare match Output level inverted Output level at the count stops Timing to set the TRF register to 0000h 	<ul style="list-style-type: none"> Whether the timer interrupt is generated when counting is started Output pin level when pulse output is started

Remark m: Unit number (m = 0, 1), n: Channel number (n = 0, 2),
p: Slave channel number (n = 0: p = 1, 2, 3, n = 2: p = 3)

2.4 Assigned I/O Pins

Table 2.4 lists the I/O pins assigned for use in R8C/36M group.

Table 2.4 R8C/36M Group I/O Pins

Pin Name	Assigned Pins	I/O
TRFI	P8_3	Input
TRFO00	P8_0	Output
TRFO01	P8_1	Output
TRFO02	P8_2	Output
TRFO10	P8_3	Output
TRFO11	P8_4	Output
TRFO12	P8_5	Output

Table 2.5 lists the I/O pins assigned for use in RL78/G14.

Table 2.5 RL78/G14 I/O Pins (64-pin products)

Unit Number	Target Channel	Pin Name	Assigned Pins	I/O
Unit 0	Channel 0	TI00	P00	Input
		TO00	P01	Output
	Channel 1	TI01	P16	Input
		TO01	P16	Output
	Channel 2	TI02	P17	Input
		TO02	P17	Output
	Channel 3	TI03	P31	Input
		TO03	P31	Output

2.5 Register Compatibility

Register compatibilities between timer RF in R8C/36M group and TAU in RL78/G14 are listed in Table 2.6.

Table 2.6 Register Compatibility

Item	R8C/36M Group	RL78/G14
Count start	<ul style="list-style-type: none"> • TRFCR0 register TSTART bit 	<ul style="list-style-type: none"> • TSm register Bit TSmn
Count status flag	N/A	<ul style="list-style-type: none"> • TEm register Bit TE_{mn}
Count stop	<ul style="list-style-type: none"> • TRFCR0 register TSTART bit 	<ul style="list-style-type: none"> • TTm register Bit TT_{mn}
Pin Select	<ul style="list-style-type: none"> • TIMSR register 	<ul style="list-style-type: none"> • PMCxx register • PMxx register • Pxx register
Operating mode select	<ul style="list-style-type: none"> • TRFCR1 register TMOD bit 	<ul style="list-style-type: none"> • TMR_{mn} register Bits MD_{mn}1 to MD_{mn}3
Count source select	<ul style="list-style-type: none"> • TRFCR0 register Bits TCK0 and TCK1 	<ul style="list-style-type: none"> • TPSm register • TMR_{mn} register Bits CKS_{mn}0, CKS_{mn}1, CCS_{mn}
Timer	<ul style="list-style-type: none"> • TRF register 	<ul style="list-style-type: none"> • Registers TCR_{mn}, TDR_{mn} (TCR_{mn}: read-only, TDR_{mn}: read/write)
Capture and compare register	<ul style="list-style-type: none"> • Registers TRFM0 and TRFM1 	<ul style="list-style-type: none"> • Registers TCR_{mn}, TDR_{mn} (TCR_{mn}: read-only, TDR_{mn}: read/write)
Capture polarity select	<ul style="list-style-type: none"> • TRFCR0 register Bits TRFC03 and TRFC04 	<ul style="list-style-type: none"> • TMR_{mn} register Bits CIS_{mn}0 and CIS_{mn}1
Input filter select	<ul style="list-style-type: none"> • TRFCR1 register Bits TIPF0 and TIPF1 	<ul style="list-style-type: none"> • Registers NFEN1 and NFEN2
Independent channel operation/simultaneous channel operation (slave/master) select	N/A	<ul style="list-style-type: none"> • TMR_{mn} register Bits MASTER_{mn}, SPLIT_{mn} ^{Notes 1, 2}
Count start and interrupt setting	N/A	<ul style="list-style-type: none"> • TMR_{mn} register MD_{mn}0 bit
Counter overflow status	N/A	<ul style="list-style-type: none"> • TSR_{mn} register OVF bit
Timer input select on channels 1 and 3	N/A	<ul style="list-style-type: none"> • TIS0 register Bits TIS00 to TIS02, TIS04
Timer output buffer	N/A	<ul style="list-style-type: none"> • TOm register TO_{mn} bit
Timer output enable	<ul style="list-style-type: none"> • Register TRFOUT 	<ul style="list-style-type: none"> • TOEm register TOE_{mn} bit
Timer output level control	<ul style="list-style-type: none"> • TRFCR0 register Bit TRFC05 • TRFCR1 register Bits TRFC14 and TRFC15 Bits TRFC16 and TRFC17 • TRFCR0 register Bit TRFC06 	<ul style="list-style-type: none"> • TOLm register TOL_{mn} bit

Notes: 1. When channels 1 and 3 are in 8-bit Input Capture Mode, bits TSH_m1 and TSH_m3 are triggers to enable operation of (start) the higher 8-bit timer.

2. When channels 1 and 3 are in 8-bit Input Capture Mode, bits TEH_m1 and TEH_m3 indicate whether the higher 8-bit timer is enabled or stopped.

3. How to migrate Timer RF in this sample code

In this sample program, the operation of timer RF of R8C/36M group is realized with TAU of RL78/G14 by the method shown in Table 3.1.

For detailed contents of the sample program, please refer to "4. Example of Migration from Input Capture Mode" ~ "5. Example of Migration from Output Compare Mode".

Table 3.1 How to migrate from R8C/36M group to RL78/G14 in this sample program

Timer RF in R8C/36M	TAU in RL78/G14
Mode	Mode
Input capture mode	Input pulse interval measurement
Output compare mode	PWM function

4. Example of Migration from Input Capture Mode

4.1 Specifications

When implementing input capture mode of timer RF in R8C/36M, RL78/G14 can use input pulse interval measurement function of TAU.

Counting is started by the valid edge of a pulse signal input to a timer input pin (TImn). The count value of the timer is captured at the valid edge of the next pulse. In this way, the interval of the input pulse can be measured.

Table 4.1 lists the peripheral functions to be used and their uses (example of migration from input capture mode), and Figure 4.1 shows the operation overview (example of migration from input capture mode).

Table 4.1 Peripheral Functions to be Used and Their Uses (Example of Migration from Input Capture Mode)

Peripheral Function	Use
Timer array unit (input pulse interval measurement)	Measure the interval of TImn input pulse

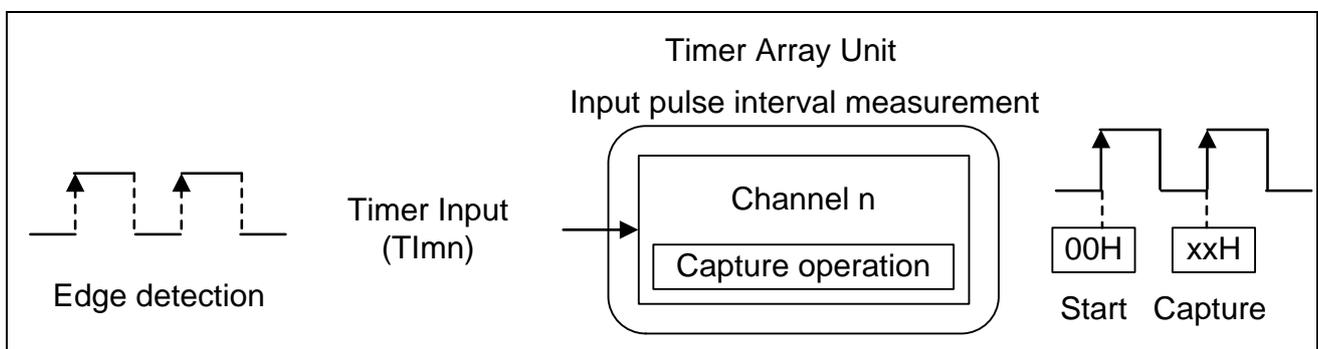


Figure 4.1 Operation Overview (Example of Migration from Input Capture Mode)

4.2 Operation Check Conditions

The sample code described in this chapter has been checked under the conditions listed in the table below.

Table 4.2 Operation Check Conditions

Item	Description
Microcontroller used	RL78/G14 (R5F104LEAFB)
Operating frequency	High-speed on-chip oscillator (HOCO) clock: 32 MHz CPU/peripheral hardware clock: 32 MHz
Operating voltage	5.0V (can run on a voltage range of 2.9 V to 5.5 V.) LVD operation (V_{LVD}): Reset mode 2.81 V (2.76 V to 2.87 V)
Integrated development environment (CS+)	CS+ V4.01.00 from Renesas Electronics Corp.
C compiler (CS+)	CC-RL V1.03.00 from Renesas Electronics Corp.
Integrated development environment (e ² studio)	e ² studio V5.2.0.020 from Renesas Electronics Corp.
C compiler (e ² studio)	CC-RL V1.03.00 from Renesas Electronics Corp.

4.3 Description of Hardware

4.3.1 Hardware Configuration Example

Figure 4.2 shows an example of hardware configuration that is used for this chapter.

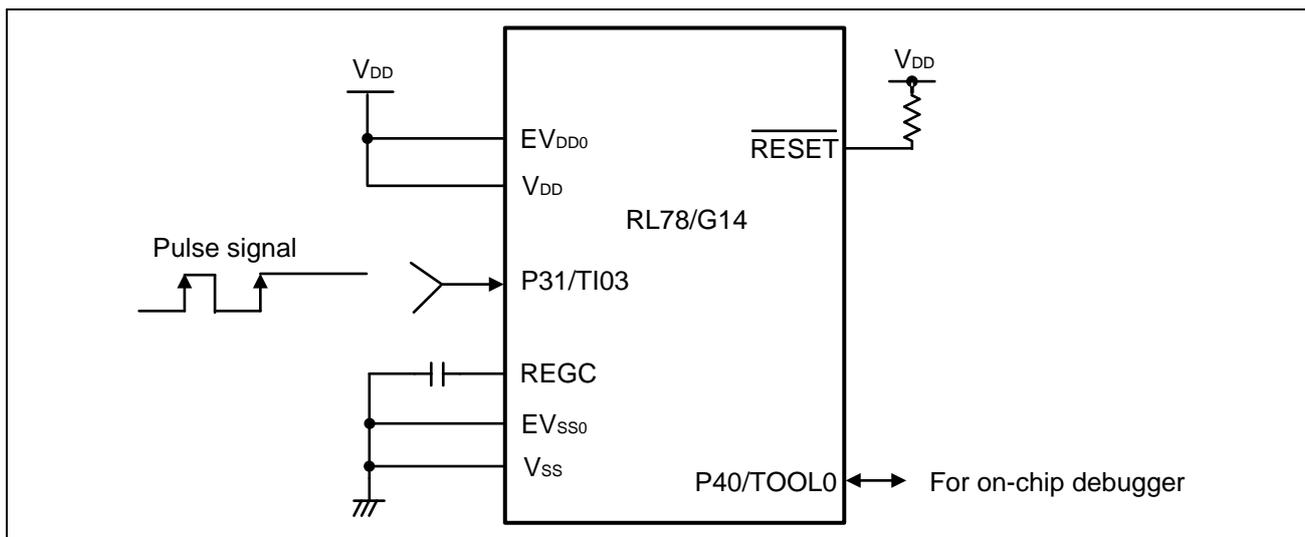


Figure 4.2 Hardware Configuration

- Cautions:
1. The purpose of this circuit is only to provide the connection outline and the circuit is simplified accordingly. When designing and implementing an actual circuit, provide proper pin treatment and make sure that the hardware's electrical specifications are met (connect the input-only ports separately to V_{DD} or V_{SS} via a resistor).
 2. Connect any pins whose name begins with EV_{SS} to V_{SS} and any pins whose name begins with EV_{DD} to V_{DD} , respectively.
 3. V_{DD} must be held at not lower than the reset release voltage (V_{LVD}) that is specified as LVD.

4.3.2 List of Pins to be used

Table 4.3 lists the pins to be used and their functions.

Table 4.3 Pins to be Used and Their Functions

Pin Name	I/O	Description
P31/TI03	Input	Input pulse signals to the TAU0 channel 3.

4.4 Description of Software

4.4.1 Operation Outline

Each time a rising edge (valid edge) is detected on the timer input pin (TI03), the sample code described in this chapter captures the count value of the timer and measures the time interval between pulses which arrive at the timer input pin (TI03). When a timer interrupt (INTTM03) occurs upon completion of the capture, the sample code calculates the pulse interval and stores the calculation result in the on-chip RAM.

Table 4.4 lists the peripheral functions to be used and their uses. Figure 4.3 shows the timer and its interrupt operation.

- (1) Initialize the TAU.
 - <Conditions for setting>
 - Use the P31/TI03 pin to receive pulses.
 - The operation clock for TAU0 channel 3 should be f_{CLK} .
 - Set TAU0 channel 3 to the capture mode.
 - Select "rising edge detection" as the input edge on the TI03 pin.
 - Select the TI03 pin input valid edge to trigger the capture.
- (2) Set the TS03 bit of the timer channel start register 0 (TS0) to 1 to enable count operation. This clears the timer count register (TCR03) to 0000H and starts counting. The sample program executes a HALT instruction.
- (3) When a valid edge is detected, the value of the timer count register (TCR03) is captured and put into the timer data register (TDR03). A timer interrupt (INTTM03) occurs upon completion of the capture. The timer count register (TCR03) is cleared to 0000H and the TAU waits for the next valid edge input.
 - An invalid value is captured when a timer interrupt (INTTM03) occurs upon completion of the first capture. This data is not used.
- (4) In the processing of a timer interrupt (INTTM03) which occurs upon completion of the second capture, the timer data register (TDR03)'s value (pulse width) is stored in the on-chip RAM.

Table 4.4 Peripheral Functions to be Used and Their Uses

Peripheral Function	Use
Timer array unit 0	Measurement of the time interval between input pulses on the timer input pin (TI03)

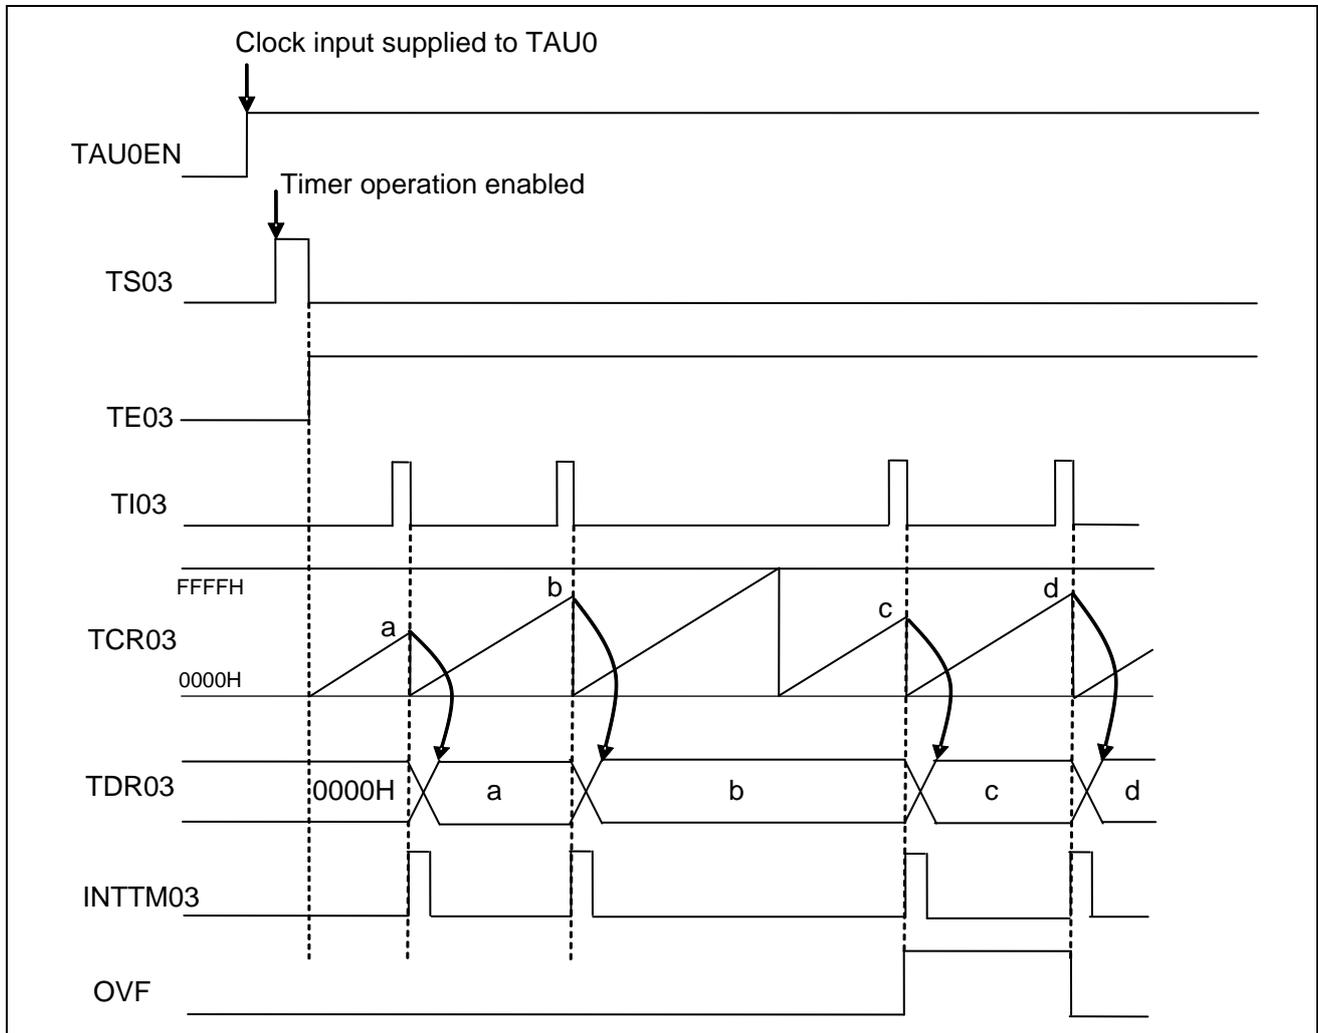


Figure 4.3 Overview of Timer Operation and Interrupts

4.4.2 List of Option Byte Setting

Table 4.5 summarizes the settings of the option bytes.

Table 4.5 Option Byte Settings

Address	Value	Description
000C0H/010C0H	01101110B	Disables the watchdog timer. (Stops counting after the release from the reset state.)
000C1H/010C1H	01111111B	LVD reset mode which uses 2.81 V (2.76 V to 2.87 V)
000C2H/010C2H	11101000B	HS mode, HOCO: 32 MHz
000C3H/010C3H	10000100B	Enables the on-chip debugger.

4.4.3 List of Constant

Table 4.6 lists the constants that are used in this sample program.

Table 4.6 Constants for the Sample Program

Constant	Setting	Description
_0001_TAU_OVERFLOW_OCCURS	0x0001U	Detects an overflow.

4.4.4 List of Variables

Table 4.7 lists the global variables that are used in this sample program.

Table 4.7 Global Variables for the Sample Program

Type	Variable Name	Contents	Function Used
volatile uint32_t	g_tau0_ch3_width	Temporary buffer which holds the measured pulse interval	r_tau0_channel3_interrupt()

4.4.5 List of Functions

Table 4.8 lists the functions that are used in this sample program.

Table 4.8 Functions

Function Name	Outline
R_TAU0_Channel3_Start()	Starts operation of TAU0 channel 3.
r_tau0_channel3_interrupt()	Processes timer interrupts on TAU0 channel 3.

4.4.6 Function Specification

The followings are the functions that are used in this sample program.

[Function Name] R_TAU0_Channel3_Start()

Synopsis	TAU0 channel 3 operation start
Header	r_cg_macrodriver.h r_cg_timer.h r_cg_userdefine.h
Declaration	void R_TAU0_Channel3_Start(void)
Explanation	This function unmask TAU0 channel 3 interrupts and starts count operation.
Arguments	None
Return value	None
Remarks	None

[Function Name] r_tau0_channel3_interrupt()

Synopsis	TAU0 channel 3 timer interrupt processing
Header	r_cg_macrodriver.h r_cg_timer.h r_cg_userdefine.h
Declaration	static void __near r_tau0_channel3_interrupt(void)
Explanation	This function saves the interval value to RAM.
Arguments	None
Return value	None
Remarks	None

4.4.7 Flow Chart

4.4.6.1 Overall Flow

Figure 4.4 shows the overall flow of the sample program described in this chapter.

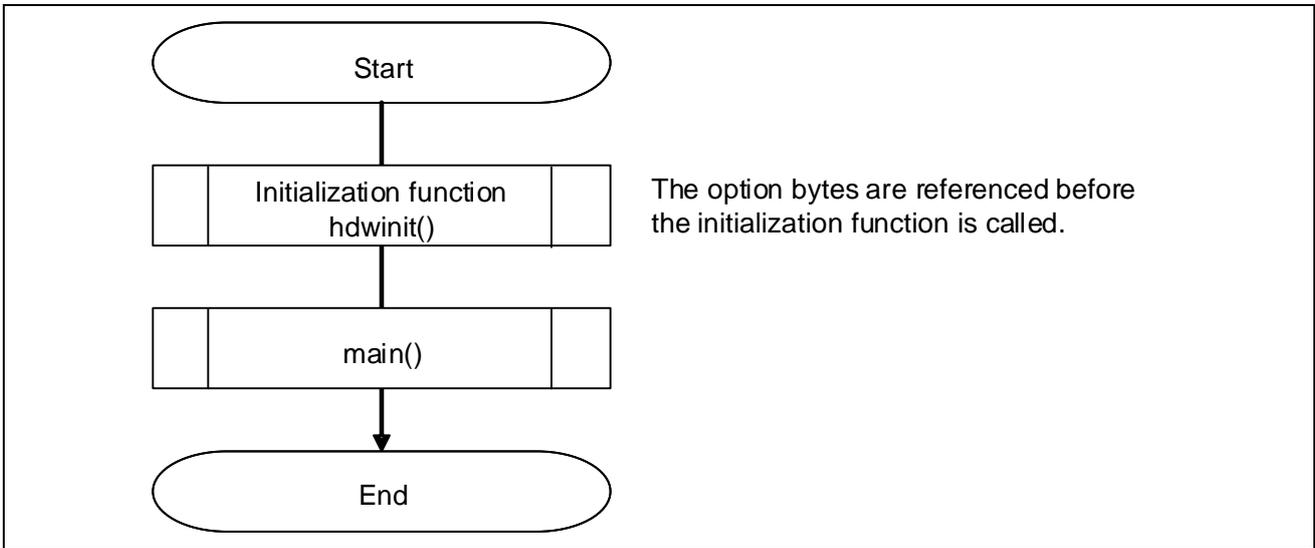


Figure 4.4 Overall Flow

4.4.6.2 Initialization Function

Figure 4.5 shows the flowchart for the initialization function.

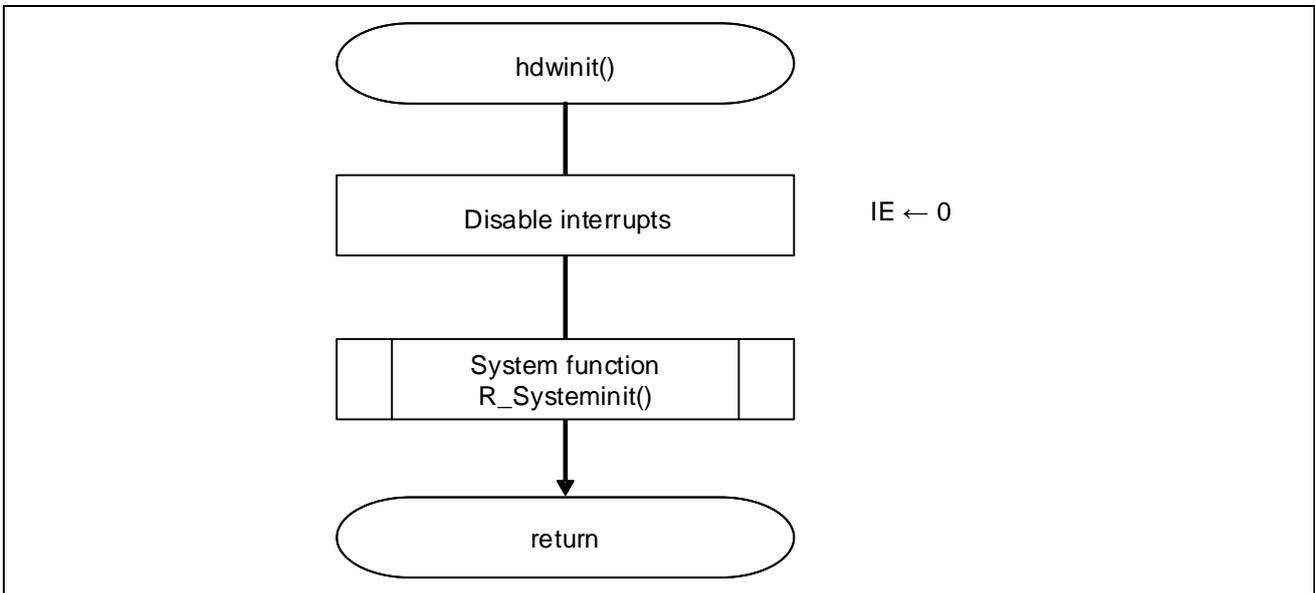


Figure 4.5 Initialization Function

4.4.6.3 System Function

Figure 4.6 shows the flowchart for the system function.

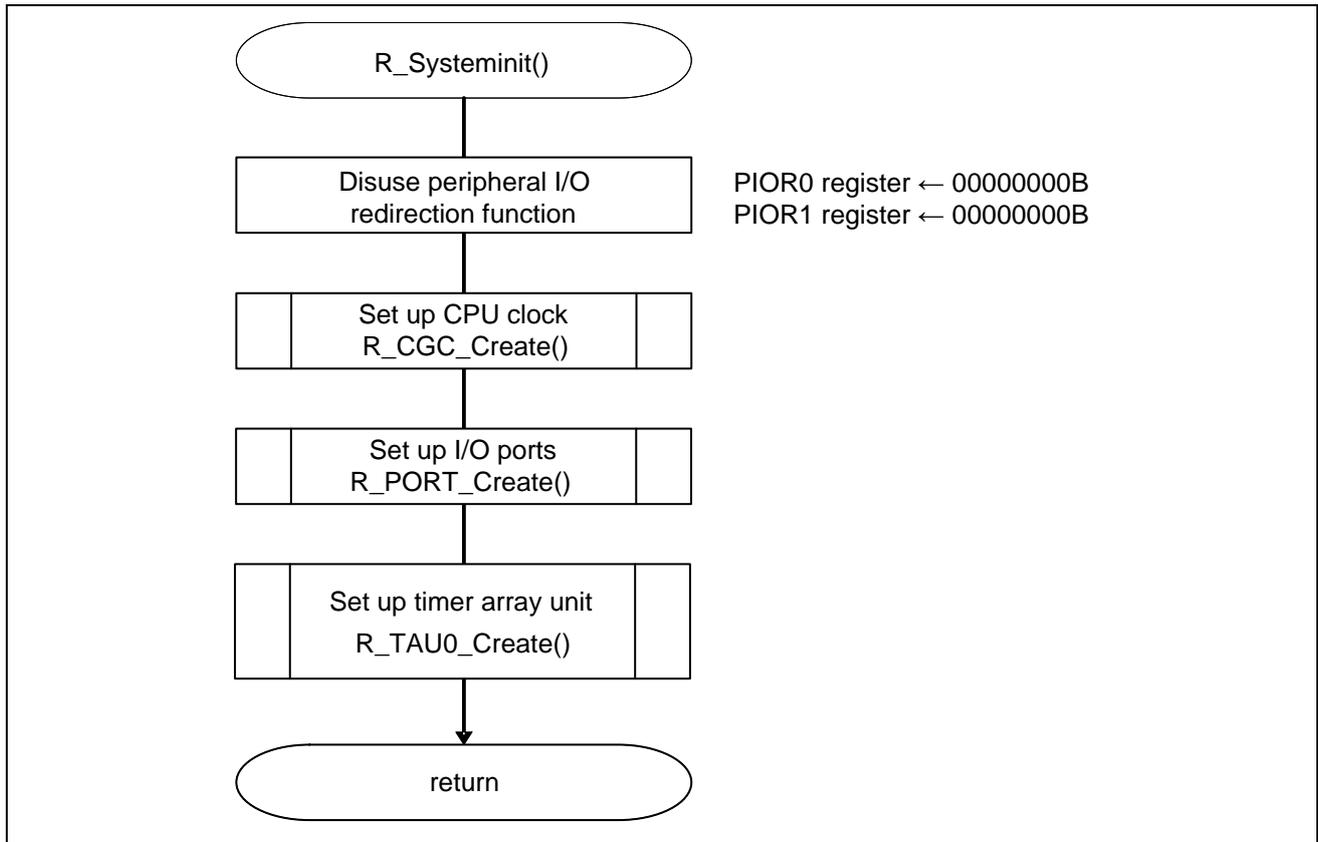


Figure 4.6 System Function

4.4.6.4 CPU Clock Setup

Figure 4.7 shows the flowchart for setting up the CPU clock.

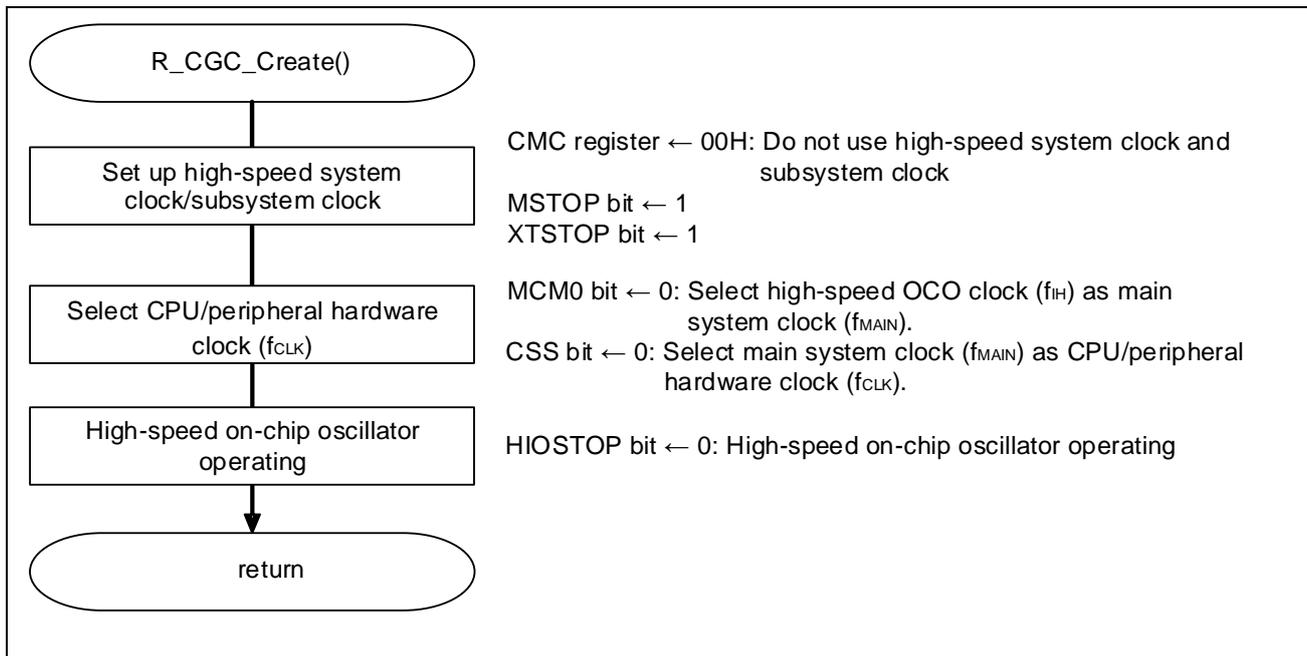


Figure 4.7 CPU Clock Setup

4.4.6.5 I/O Port Setup

Figure 4.8 shows the flowchart for setting up the I/O ports.

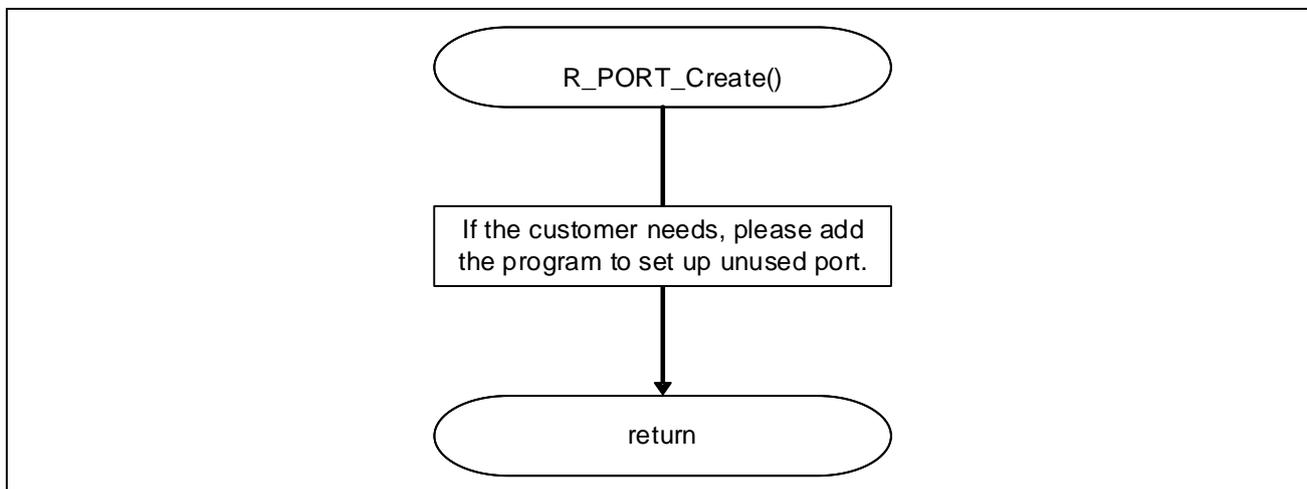


Figure 4.8 I/O Port Setup

Caution: Provide proper treatment for unused pins so that their electrical specifications are observed. Connect each of any unused input-only ports to V_{DD} or V_{SS} via a separate resistor.

4.4.6.6 Timer Array Unit Setup

Figure 4.9 shows the flowchart for setting up the timer array unit.

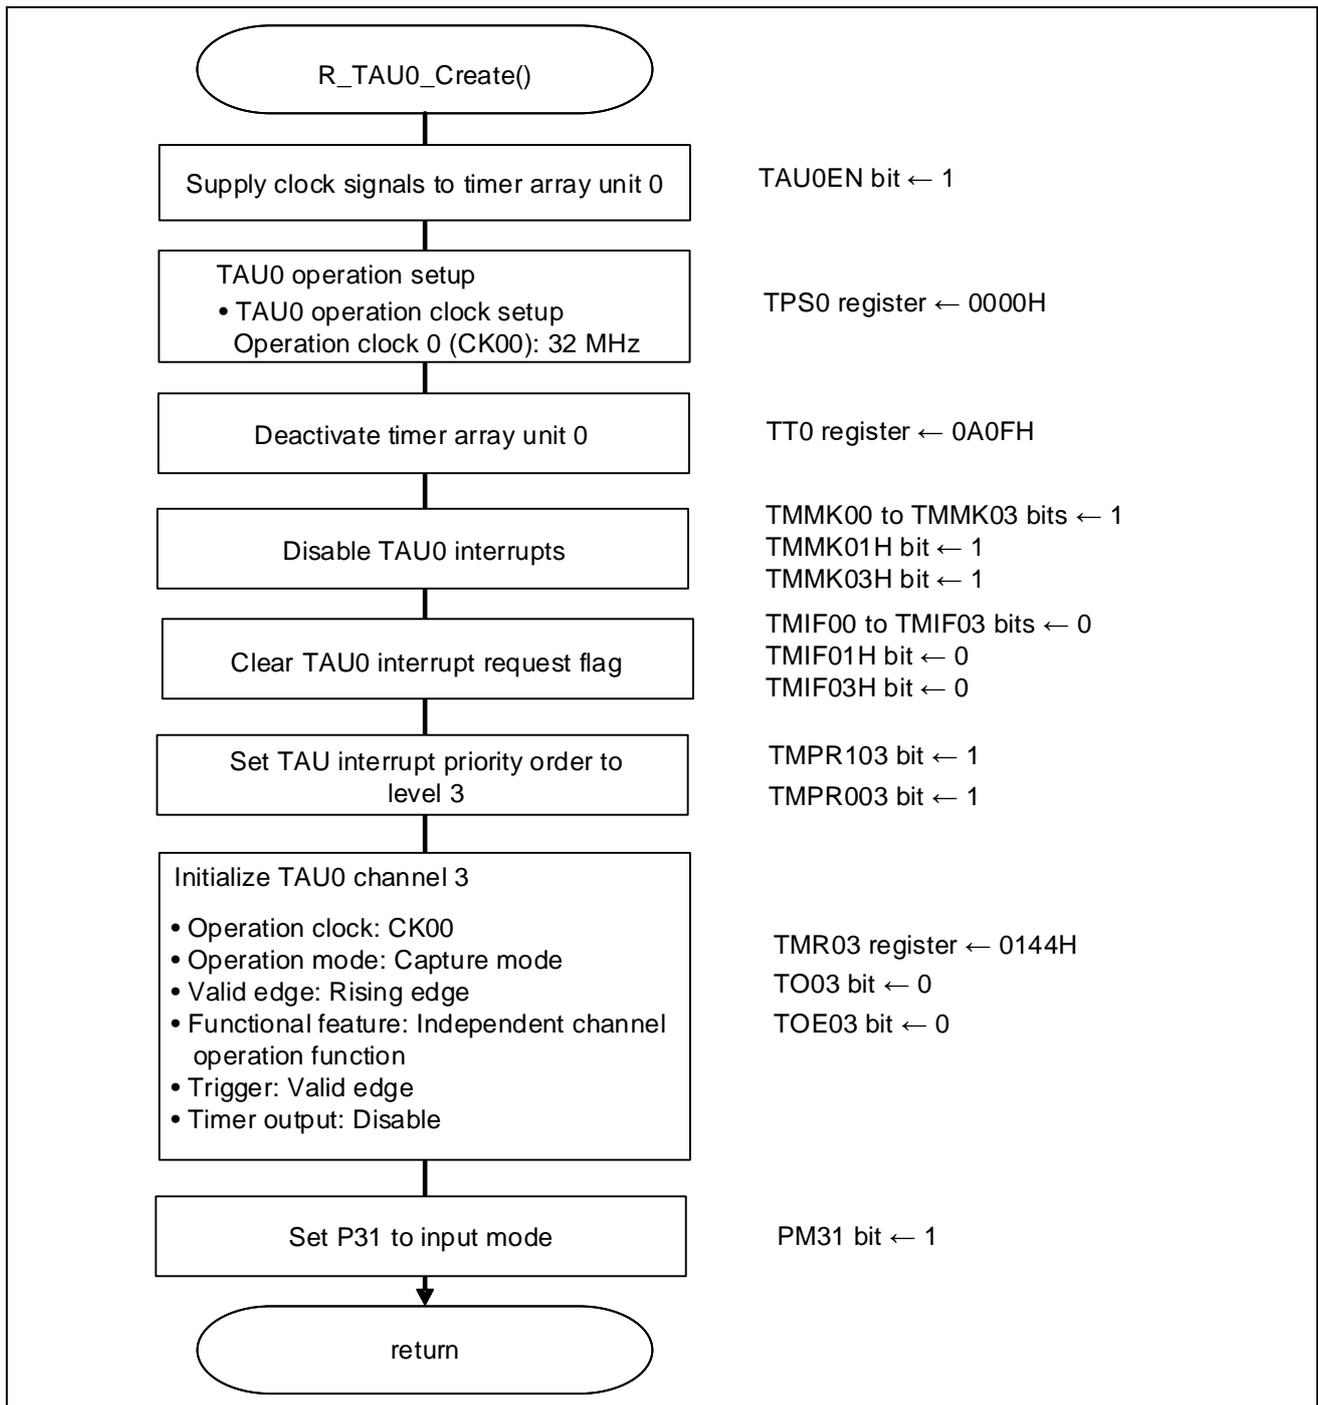


Figure 4.9 Timer Array Unit Setup

RL78/G14, R8C/36M Group Migration Guide from R8C to RL78: Timer RF to Timer Array Unit

Starting clock signal supply to the timer array unit 0

- Peripheral enable register 0 (PER0)

Start supplying clock signals to the timer array unit 0.

Symbol: PER0

7	6	5	4	3	2	1	0
RTCEN	IICA1EN	ADCEN	IICA0EN	SAU1EN	SAU0EN	TAU1EN	TAU0EN
x	x	x	x	x	x	x	1

Bit 0

TAU0EN	Control of timer array unit 0 input clock supply
0	Stops input clock supply.
1	Enables input clock supply.

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Configuring the timer clock frequency

- Timer clock select register 0 (TPS0)

Select an operation clock for timer array unit 0.

Symbol: TPS0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	PRS 031	PRS 030	0	0	PRS 021	PRS 020	PRS 013	PRS 012	PRS 011	PRS 010	PRS 003	PRS 002	PRS 001	PRS 000
0	0	x	x	0	0	x	x	x	x	x	x	0	0	0	0

Bits 3 to 0

PRS 003	PRS 002	PRS 001	PRS 000	Operation clock (CK00) selection					
					f _{CLK} = 2 MHz	f _{CLK} = 4 MHz	f _{CLK} = 8 MHz	f _{CLK} = 20 MHz	f _{CLK} = 32 MHz
0	0	0	0	f _{CLK}	2 MHz	4 MHz	8 MHz	20 MHz	32 MHz
0	0	0	1	f _{CLK} /2	1 MHz	2 MHz	4 MHz	10 MHz	16 MHz
0	0	1	0	f _{CLK} /2 ²	500 kHz	1 MHz	2 MHz	5 MHz	8 MHz
0	0	1	1	f _{CLK} /2 ³	250 kHz	500 kHz	1 MHz	2.5 MHz	4 MHz
0	1	0	0	f _{CLK} /2 ⁴	125 kHz	250 kHz	500 kHz	1.25 MHz	2 MHz
0	1	0	1	f _{CLK} /2 ⁵	62.5 kHz	125 kHz	250 kHz	625 kHz	1 MHz
0	1	1	0	f _{CLK} /2 ⁶	31.3 kHz	62.5 kHz	125 kHz	313 kHz	500 kHz
0	1	1	1	f _{CLK} /2 ⁷	15.6 kHz	31.3 kHz	62.5 kHz	156 kHz	250 kHz
1	0	0	0	f _{CLK} /2 ⁸	7.81 kHz	15.6 kHz	31.3 kHz	78.1 kHz	125 kHz
1	0	0	1	f _{CLK} /2 ⁹	3.91 kHz	7.81 kHz	15.6 kHz	39.1 kHz	62.5 kHz
1	0	1	0	f _{CLK} /2 ¹⁰	1.95 kHz	3.91 kHz	7.81 kHz	19.5 kHz	31.25 kHz
1	0	1	1	f _{CLK} /2 ¹¹	977 Hz	1.95 kHz	3.91 kHz	9.77 kHz	15.6 kHz
1	1	0	0	f _{CLK} /2 ¹²	488 Hz	977 Hz	1.95 kHz	4.88 kHz	7.81 kHz
1	1	0	1	f _{CLK} /2 ¹³	244 Hz	488 Hz	977 Hz	2.44 kHz	3.91 kHz
1	1	1	0	f _{CLK} /2 ¹⁴	122 Hz	244 Hz	488 Hz	1.22 kHz	1.95 kHz
1	1	1	1	f _{CLK} /2 ¹⁵	61.0 Hz	122 Hz	244 Hz	610 Hz	977 Hz

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware

x: Bits not used in this setting item

Setting up the channel 3 operation mode

- Timer mode register 03 (TMR03)

Specify the operation mode, edge, trigger, channel and clocks.

Symbol: TMR03

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
CKS	CKS	0	CCS	0	STS	STS	STS	CIS	CIS	0	0	MD	MD	MD	MD	
031	030		03		032	031	030	031	030			033	032	031	030	
0	0	0	0	0	0	0	1	0	1	0	0	0	1	0	0	

Bits 15 and 14

CKS031	CKS030	Selection of operation clock (f_{MCK}) of channel 3
0	0	Operation clock CK00 set by timer clock select register 0 (TPS0)
0	1	Operation clock CK02 set by timer clock select register 0 (TPS0)
1	0	Operation clock CK01 set by timer clock select register 0 (TPS0)
1	1	Operation clock CK03 set by timer clock select register 0 (TPS0)

Bit 12

CCS03	Selection of count clock (f_{TCLK}) of channel 3
0	Operation clock (f _{MCK}) specified by the CKS030 and CKS031 bits
1	Valid edge of input signal input from the TI03 pin

Bits 10 to 8

STS032	STS031	STS030	Setting of start trigger or capture trigger of channel 3
0	0	0	Only software trigger start is valid (other trigger sources are unselected).
0	0	1	Valid edge of the TI03 pin input is used as both the start trigger and capture trigger.
0	1	0	Both the edges of the TI03 pin input are used as a start trigger and a capture trigger.
1	0	0	Interrupt signal of the master channel is used (when the channel is used as a slave channel with the simultaneous channel operation function).
Other than above			Setting prohibited

Bits 7 and 6

CIS031	CIS030	Selection of TI03 pin input valid edge
0	0	Falling edge
0	1	Rising edge
1	0	Both edges (when low-level width is measured) Start trigger: Falling edge, Capture trigger: Rising edge
1	1	Both edges (when high-level width is measured) Start trigger: Rising edge, Capture trigger: Falling edge

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Symbol: TMR03

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
CKS031	CKS030	0	CCS03	0	STS032	STS031	STS030	CIS031	CIS030	0	0	MD033	MD032	MD031	MD030
0	0	0	0	0	0	0	1	0	1	0	0	0	1	0	0

Bits 3 to 0

MD033	MD032	MD031	MD030	Operation mode of channel 0	Corresponding function	Count operation of TCR
0	0	0	1/0	Interval timer mode	Interval timer / Square wave output / Divider function / PWM output (master)	Counting down
0	1	0	1/0	Capture mode	Input pulse interval measurement	Counting up
0	1	1	0	Event counter mode	External event counter	Counting down
1	0	0	1/0	One-count mode	Delay counter / One-shot pulse output / PWM output (slave)	Counting down
1	1	0	0	Capture & one-count mode	Measurement of high-/low-level width of input signal	Counting up
Other than above				Setting prohibited		

The operation of each mode varies depending on MD030 bit (see table below).

Operation mode (Value set by the MD033 to MD031 bits (see table above))	MD030	Setting of starting counting and interrupt
<ul style="list-style-type: none"> Interval timer mode (0, 0, 0) Capture mode (0, 1, 0) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either).
	1	Timer interrupt is generated when counting is started (timer output also changes).
<ul style="list-style-type: none"> Event counter mode (0, 1, 1) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either).
<ul style="list-style-type: none"> One-count mode (1, 0, 0) 	0	Start trigger is invalid during counting operation. At that time, interrupt is not generated.
	1	Start trigger is valid during counting operation. At that time, interrupt is also generated.
<ul style="list-style-type: none"> Capture & one-count mode (1, 1, 0) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either). Start trigger is invalid during counting operation. At that time interrupt is not generated.
Other than above		Setting prohibited

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Configuring the output value for the timer output pin

- Timer output register 0 (TO0)

Configure the output value for the timer output pin for channel 3.

Symbol: TO0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	TO03	TO02	TO01	TO00
0	0	0	0	0	0	0	0	0	0	0	0	0	x	x	x

Bit 3

TO03	Timer output of channel 3
0	Timer output value is "0"
1	Timer output value is "1"

Enabling the timer output

- Timer output enable register 0 (TOE0)

Enable/disable the timer output for channel 3.

Symbol: TOE0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	TOE03	TOE02	TOE01	TOE00
0	0	0	0	0	0	0	0	0	0	0	0	0	x	x	x

Bit 3

TOE03	Timer output enable/disable of channel 3
0	<p>Timer output is disabled.</p> <p>Timer operation is not applied to the TO03 bit and the output is fixed.</p> <p>Writing to the TO03 bit is enabled and the level set in the TO03 bit is output from the TO03 pin.</p>
1	<p>Timer output is enabled.</p> <p>Timer operation is applied to the TO03 bit and an output waveform is generated.</p> <p>Writing to the TO03 bit is ignored.</p>

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

4.4.6.8 Main Processing

Figure 4.10 shows the flowchart for main processing.

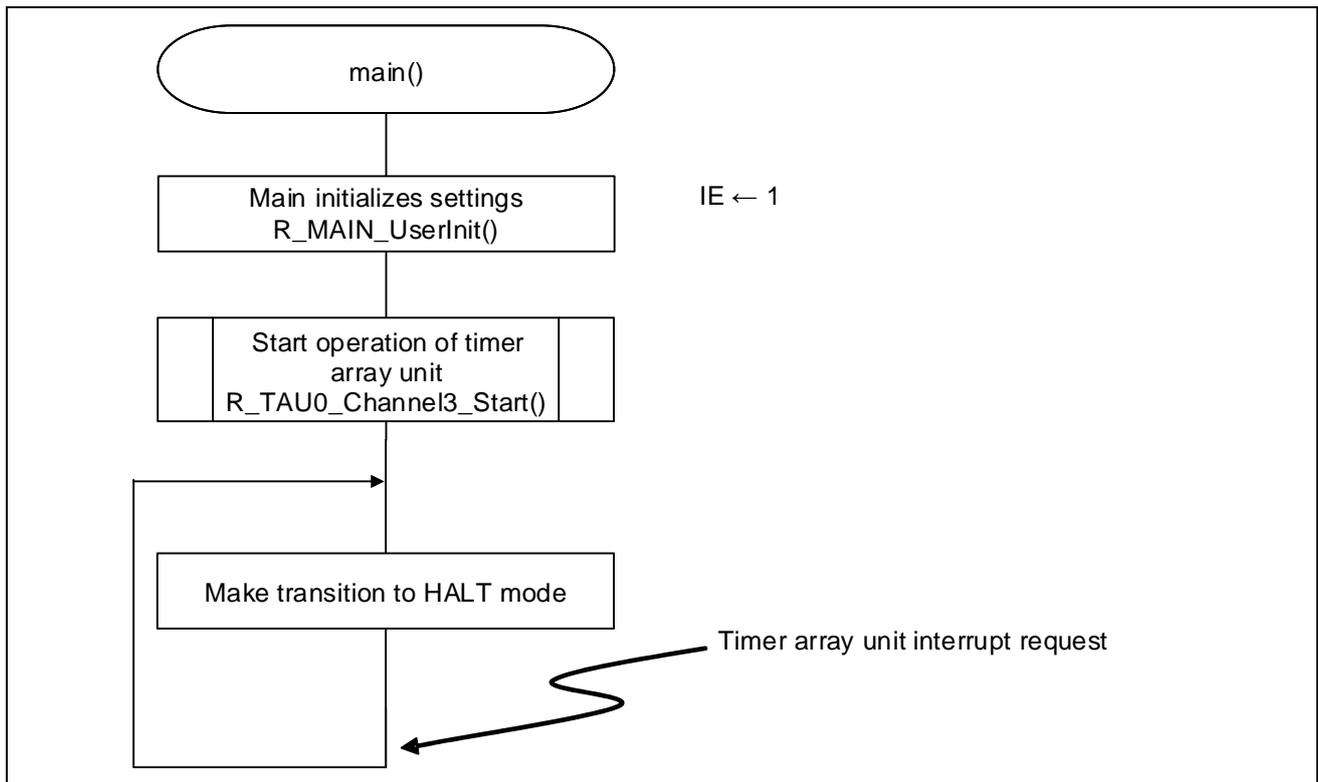


Figure 4.10 Main Processing

4.4.6.9 Timer Array Unit 0 Operation Start

Figure 4.11 shows the flowchart for starting timer array unit operation.

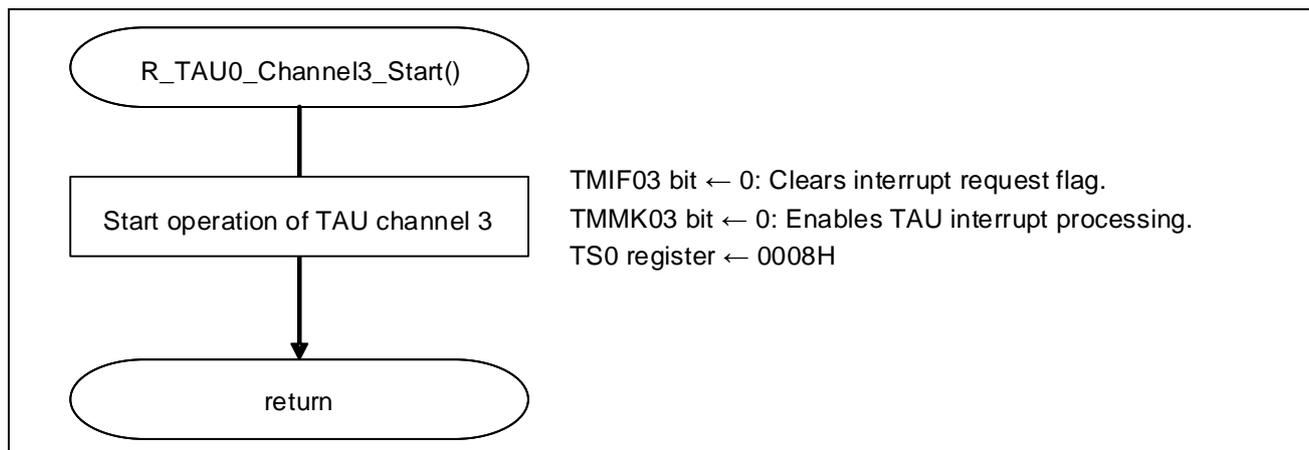


Figure 4.11 Timer Array Unit 0 Operation Start

Configuring the timer interrupt

- Interrupt request flag register (IF1L)
Clear the interrupt request flag.
- Interrupt mask flag register (MK1L)
Enable interrupt processing.

Symbol: IF1L

7	6	5	4	3	2	1	0
TMIF03	TMIF02	TMIF01	TMIF00	IICAIF0	SREIF1 TMIF03H	SRIF1 CSIIF11 IICIF11	STIF1 CSIIF10 IICIF10
0	x	x	x	x	x	x	x

Bit 7

TMIF03	Interrupt request flag
0	No interrupt request signal is generated.
1	Interrupt request is generated, interrupt request status.

Symbol: MK1L

7	6	5	4	3	2	1	0
TMMK03	TMMK02	TMMK01	TMMK00	IICAMK0	SREMK1 TMMK03H	SRMK1 CSIMK11 IICMK11	STMK1 CSIMK10 IICMK10
0	x	x	x	x	x	x	x

Bit 7

TMMK03	Interrupt processing control
0	Interrupt servicing enabled
1	Interrupt servicing disabled

Configuring the timer startup

- Timer channel start register 0 (TS0)
Enable count operation of channel 3.

Symbol: TS0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	TSH03	0	TSH01	0	0	0	0	0	TS03	TS02	TS01	TS00
0	0	0	0	x	0	x	0	0	0	0	0	1	x	x	x

Bit 3

TS03	Operation enable (start) trigger of channel 3
0	No trigger operation
1	The TE03 bit is set to 1 and the count operation becomes enabled. The TCR03 register count operation start in the count operation enabled state varies depending on each operation mode.

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

4.4.6.10 INTTM03 Interrupt Processing

Figure 4.12 shows the flowchart for INTTM03 interrupt processing.

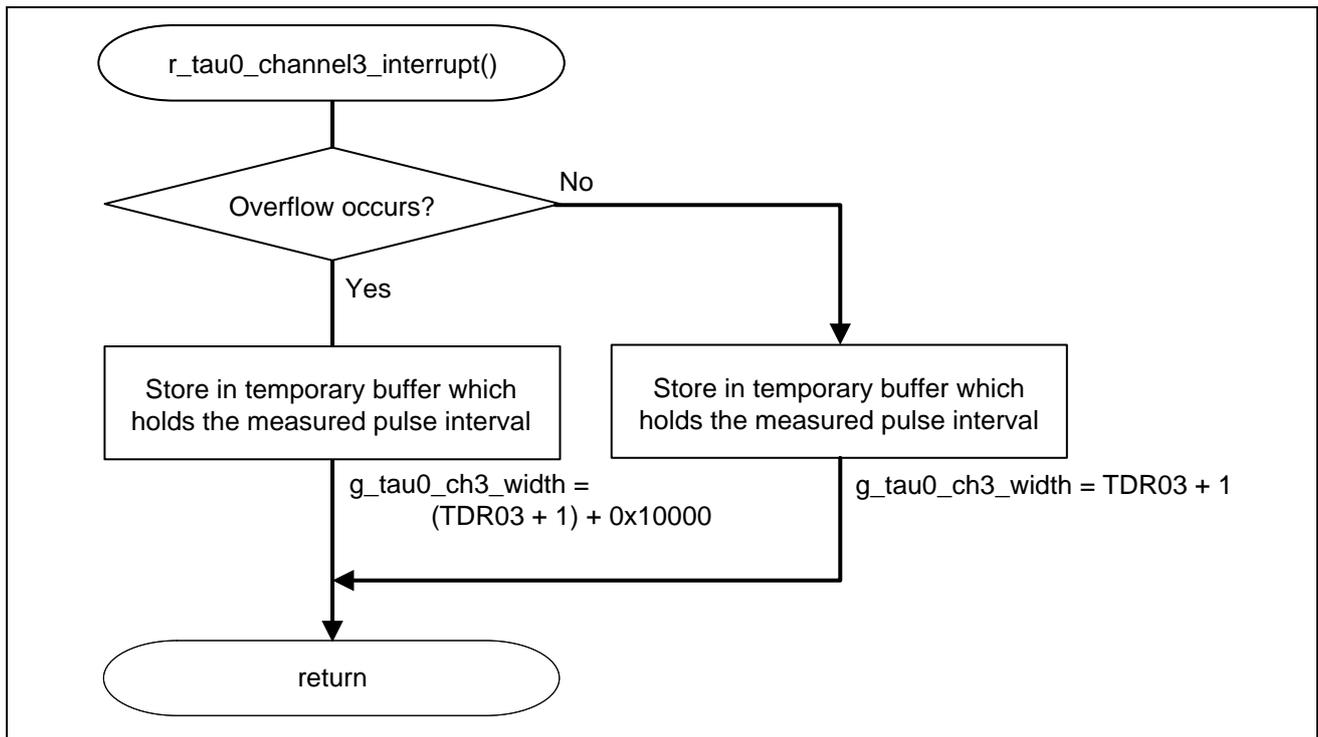


Figure 4.12 INTTM03 Interrupt Processing

5. Example of Migration from Output Compare Mode

5.1 Specifications

When implementing output compare mode of timer RF in R8C/36M, RL78/G14 can use PWM (Pulse Width Modulation) output of TAU.

Two channels are used as a set to generate a pulse with a specified period and a specified duty factor.

Table 5.1 lists the peripheral functions to be used and their uses (example of migration from output compare mode), and Figure 5.1 shows operation overview (example of migration from output compare mode).

Table 5.1 Peripheral Functions to be Used and Their Uses (Example of Migration from Output Compare Mode)

Peripheral Function	Use
Timer array unit (PWM (Pulse Width Modulation) output)	Generate a pulse with a specified period and a specified duty factor

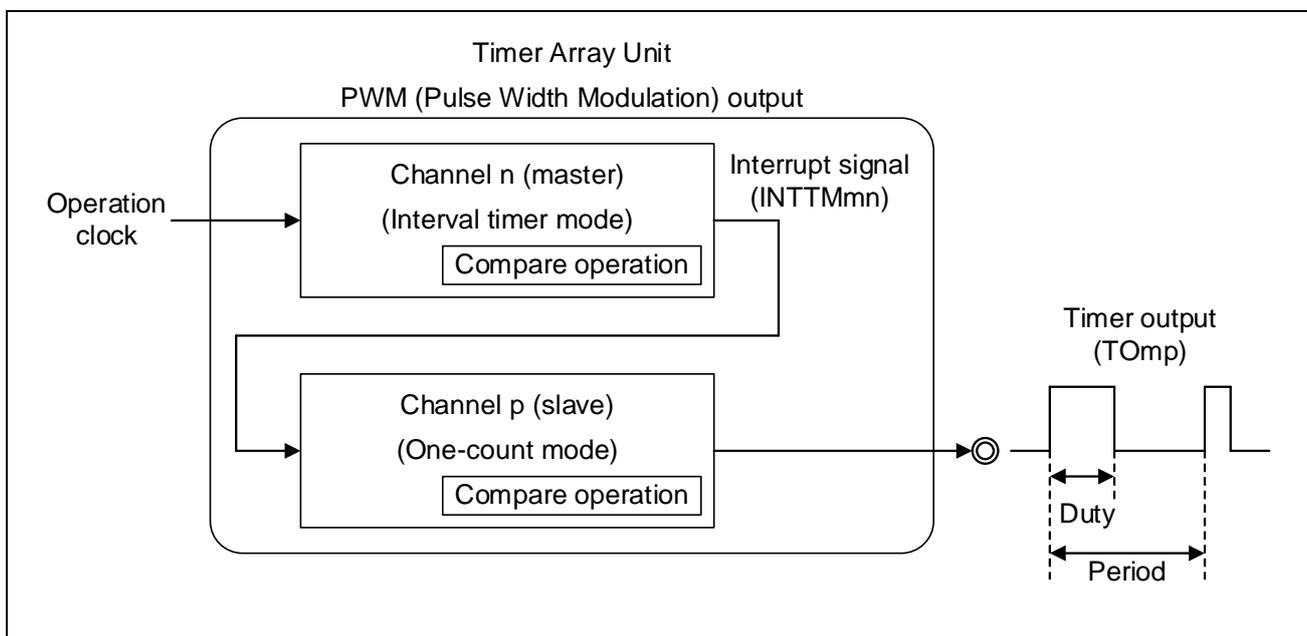


Figure 5.1 Operation Overview (Example of Migration from Output Compare Mode)

5.2 Operation Check Conditions

The sample code described in this chapter has been checked under the conditions listed in the table below.

Table 5.2 Operation Check Conditions

Item	Description
Microcontroller used	RL78/G14 (R5F104LEAFB)
Operating frequency	High-speed on-chip oscillator (HOCO) clock: 32 MHz CPU/peripheral hardware clock: 32 MHz
Operating voltage	5.0V (can run on a voltage range of 2.9 V to 5.5 V.) LVD operation (V_{LVD}): Reset mode 2.81 V (2.76 V to 2.87 V)
Integrated development environment (CS+)	CS+ V4.01.00 from Renesas Electronics Corp.
C compiler (CS+)	CC-RL V1.03.00 from Renesas Electronics Corp.
Integrated development environment (e ² studio)	e ² studio V5.2.0.020 from Renesas Electronics Corp.
C compiler (e ² studio)	CC-RL V1.03.00 from Renesas Electronics Corp.

5.3 Description of Hardware

5.3.1 Hardware Configuration Example

Figure 5.3 shows an example of the hardware configuration used for this chapter.

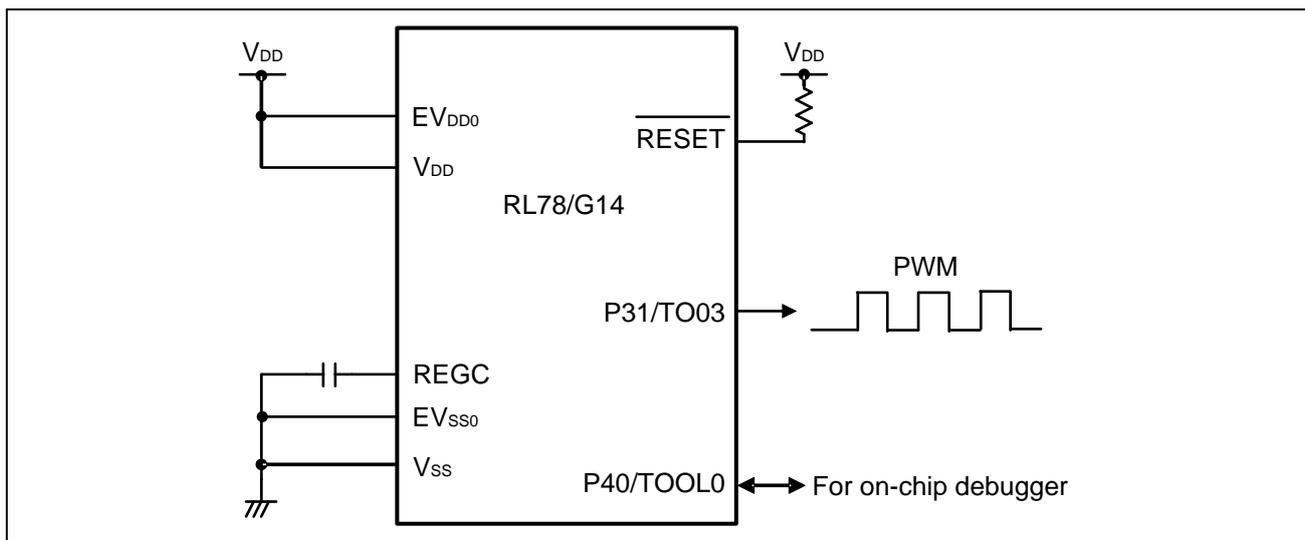


Figure 5.2 Hardware Configuration

- Cautions:
1. The purpose of this circuit is only to provide the connection outline and the circuit is simplified accordingly. When designing and implementing an actual circuit, provide proper pin treatment and make sure that the hardware's electrical specifications are met (connect the input-only ports separately to V_{DD} or V_{SS} via a resistor).
 2. Connect any pins whose name begins with EV_{SS} to V_{SS} and any pins whose name begins with EV_{DD} to V_{DD} , respectively.
 3. V_{DD} must be held at not lower than the reset release voltage (V_{LVD}) that is specified as LVD.

5.3.2 List of Pins to be used

Table lists the pins to be used and their functions.

Table 5.3 Pins to be Used and Their Functions

Pin Name	I/O	Description
P31/TO03	Output	PWM output port

5.4 Description of Software

5.4.1 Operation Outline

The sample program covered in this chapter implements PWM by operating channel 0 and channel 3 together, and delivers a PWM output from P31/TO03.

TO03 outputs PWM with a duty factor of 50%.

Table 5.4 lists the peripheral functions to be used and their uses. Figure 5.3 shows the timer and its interrupt operation.

- (1) Initialize the TAU.
 - <Conditions for setting>
 - Set the P31/TO03 pin to a PWM output.
 - Set TAU0 channel 0 to 2 ms cycle interval timer mode.
 - Set TAU0 channel 3 to one-count mode.
 - Initialize the duty ratio of the PWM output to 50%.
- (2) Operation starts when both the operation enable trigger bits for TAU0's channel 0 and channel 3 are set to 1 simultaneously. The sample program executes a HALT instruction.
- (3) When the counter of master channel (channel 0) reaches 0000H, the value of the TDR00 register is loaded again to the TCR00 register, and the counter counts down. At the same time, PWM output (TO03) goes to the active level ("H" level).
- (4) Master channel (channel 0) is used as a start trigger, the TCR03 register loads the value of the TDR03 register and the counter counts down to 0000H. When the counter of slave channel (channel 3) reaches 0000H, it waits until the next start trigger (from the master channel) is generated. At the same time, PWM output (TO03) goes to the inactive level ("L" level).
- (5) The operations described in (3) and (4) above are repeated.

Table 5.4 Required Peripheral Functions and Their Uses

Peripheral Function	Use
Timer array unit 0	PWM output control for inversion of TO03 pin output

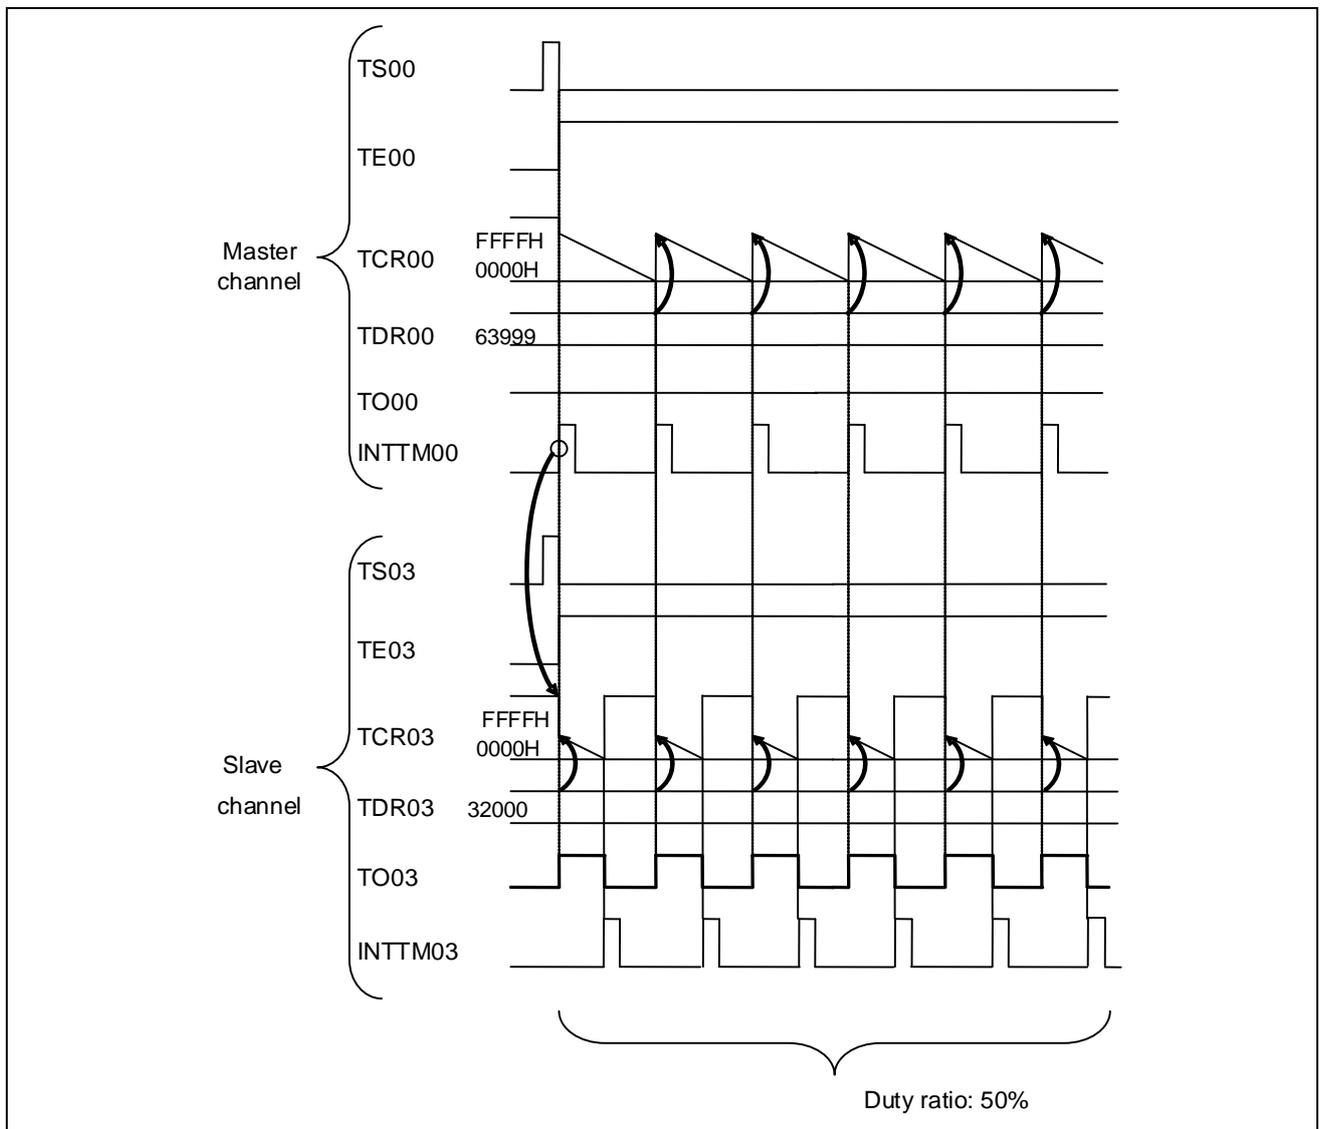


Figure 5.3 Overview of Timer Operation and Interrupts

5.4.2 List of Option Byte Setting

Table 5.5 summarizes the settings of the option bytes.

Table 5.5 Option Byte Settings

Address	Value	Description
000C0H/010C0H	01101110B	Disables the watchdog timer. (Stops counting after the release from the reset state.)
000C1H/010C1H	01111111B	LVD reset mode, 2.81 V (2.76 V to 2.87 V)
000C2H/010C2H	11101000B	HS mode, HOCO: 32 MHz
000C3H/010C3H	10000100B	Enables the on-chip debugger.

5.4.3 List of Functions

Table 5.6 lists the functions that are used in this sample program.

Table 5.6 Functions

Function	Outline
R_TAU0_Channel0_Start	TAU0 channel 0 start processing

5.4.4 Function Specification

The followings are the functions that are used in this sample program.

[Function Name] R_TAU0_Channel0_Start

Synopsis	TAU0 channel 0 start processing
Header	r_cg_macrodriver.h r_cg_timer.h r_cg_userdefine.h
Declaration	void R_TAU0_Channel0_Start(void)
Explanation	This function starts the count operation of TAU0 channel 0.
Arguments	None
Return value	None
Remarks	None

5.4.5 Flow Chart

5.4.6.1 Overall Flow

Figure 5.4 shows the overall flow of the sample program described in this chapter.

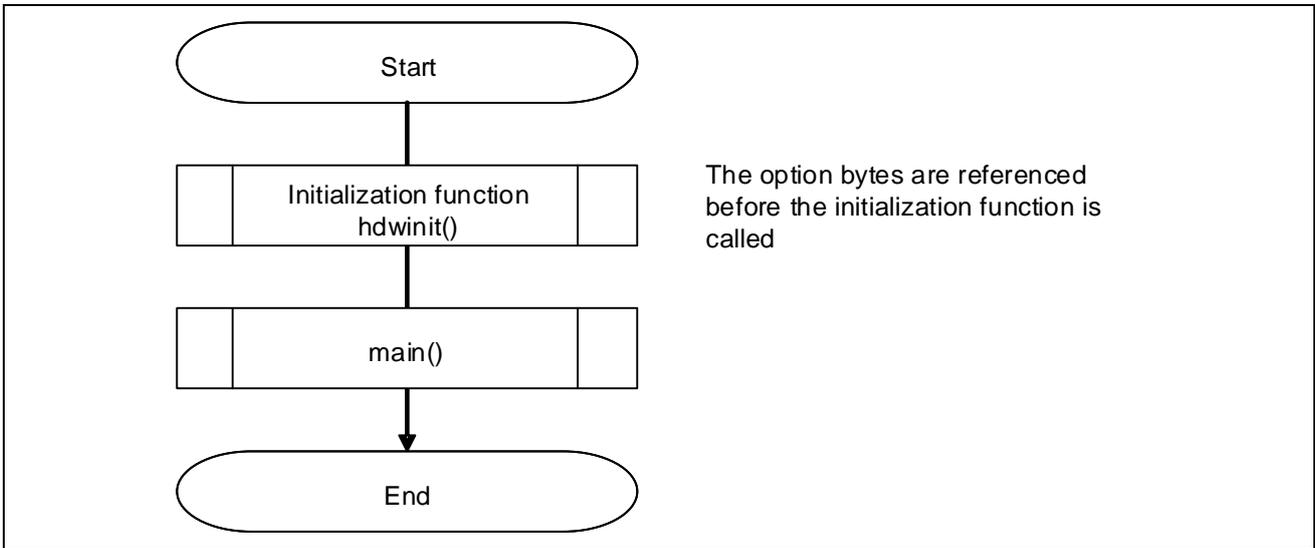


Figure 5.4 Overall Flow

5.4.6.2 Initialization Function

Figure 5.5 shows the flowchart for the initialization function.

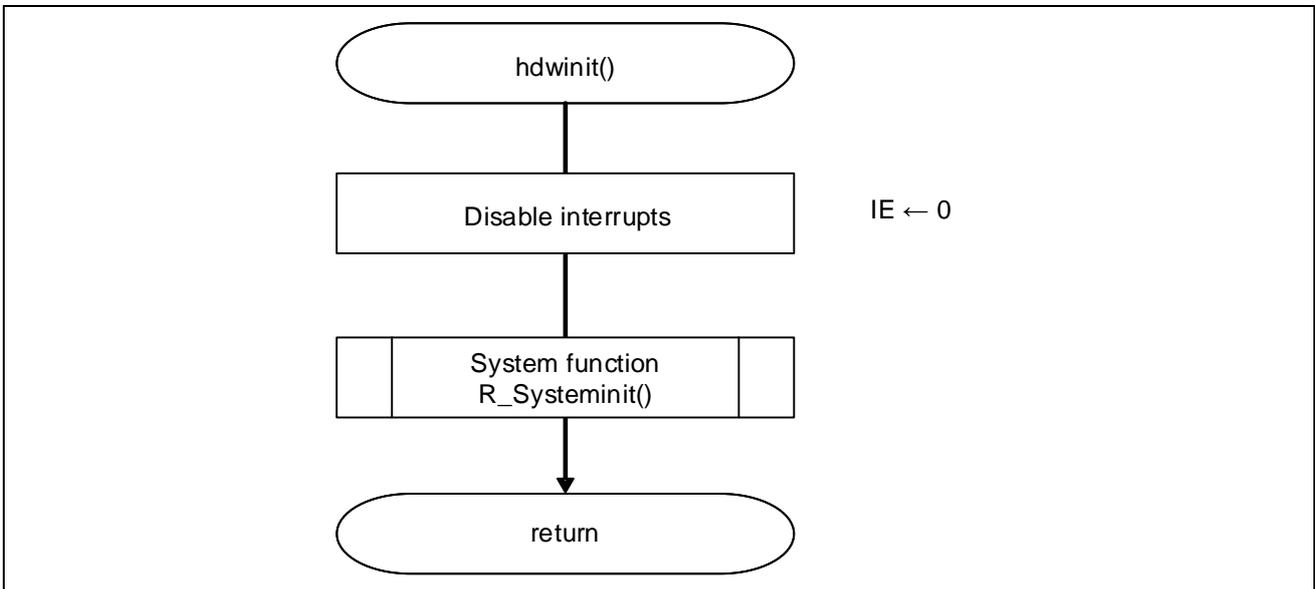


Figure 5.5 Initialization Function

5.4.6.3 System Function

Figure 5.6 shows the flowchart for the system function.

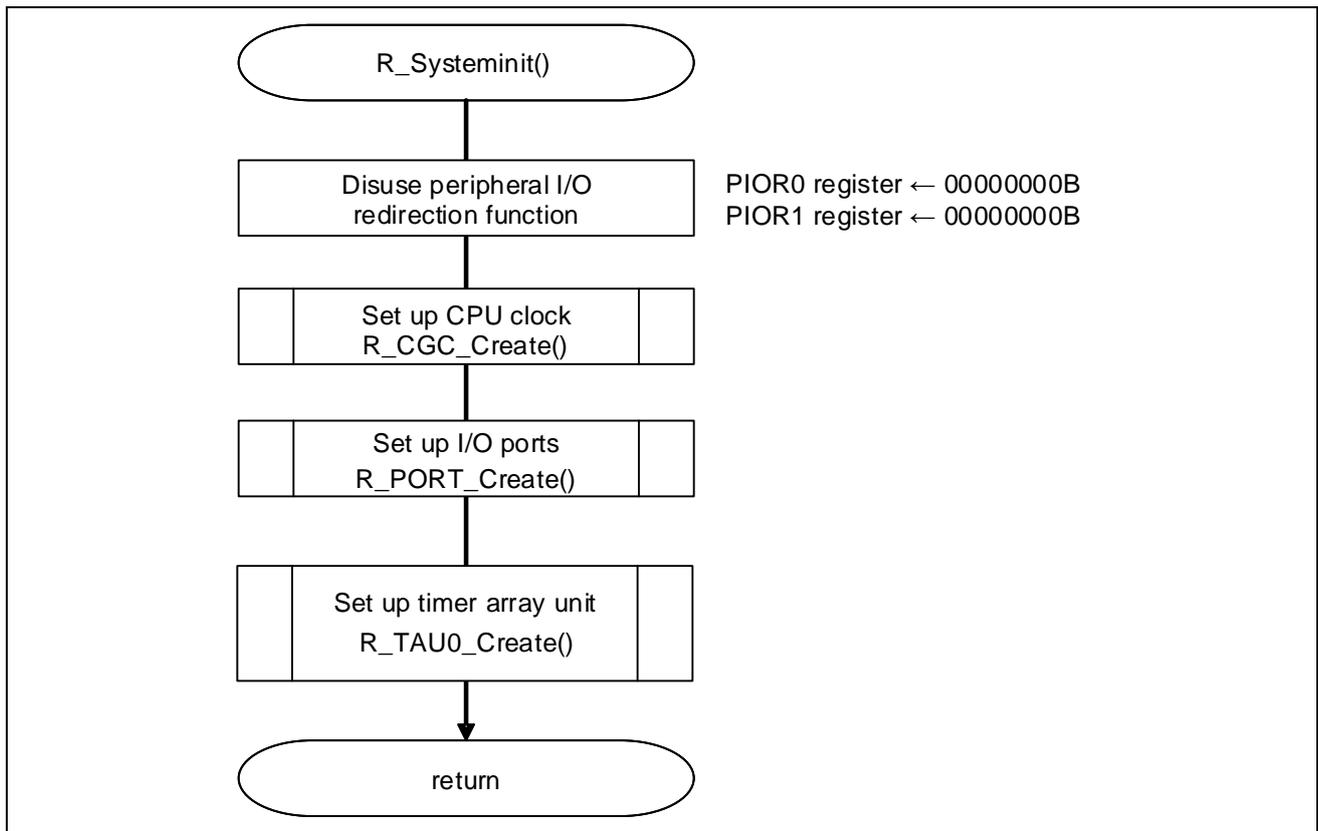


Figure 5.6 System Function

5.4.6.4 CPU Clock Setup

Figure 5.7 shows the flowchart for setting up the CPU clock.

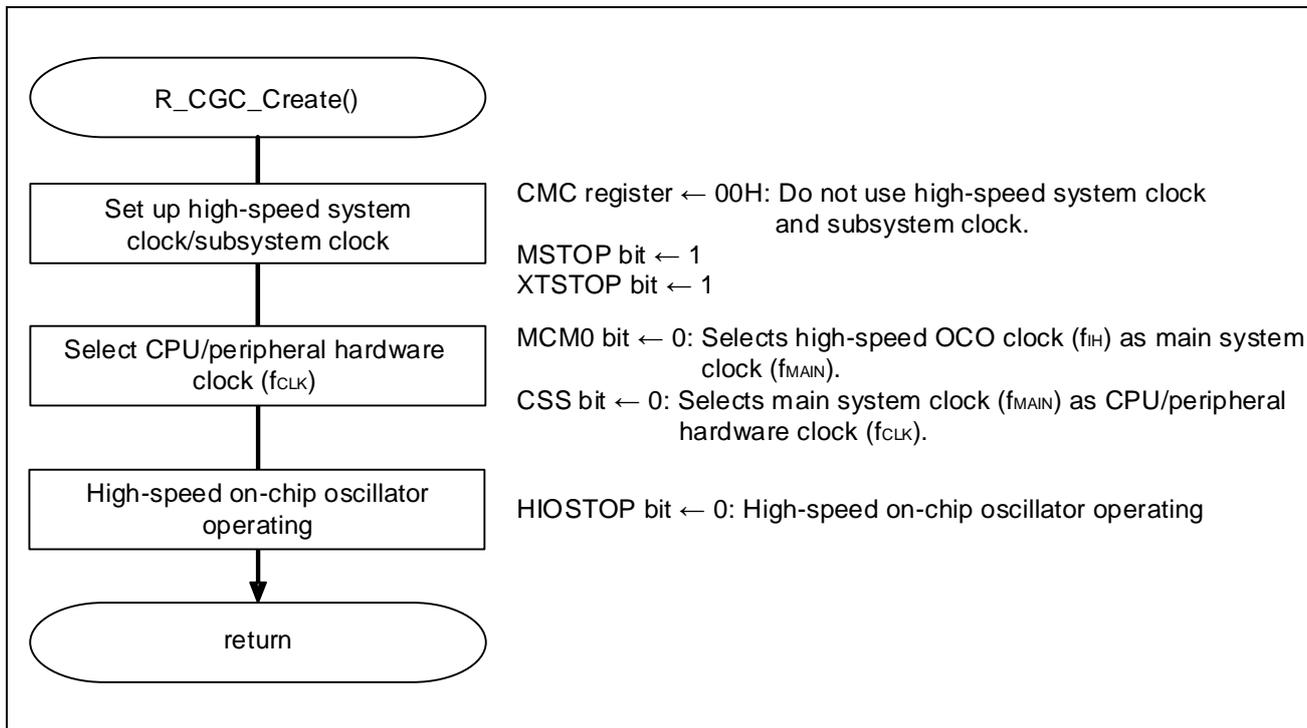


Figure 5.7 CPU Clock Setup

5.4.6.5 I/O Port Setup

Figure 5.8 shows the flowchart for setting up the I/O ports.

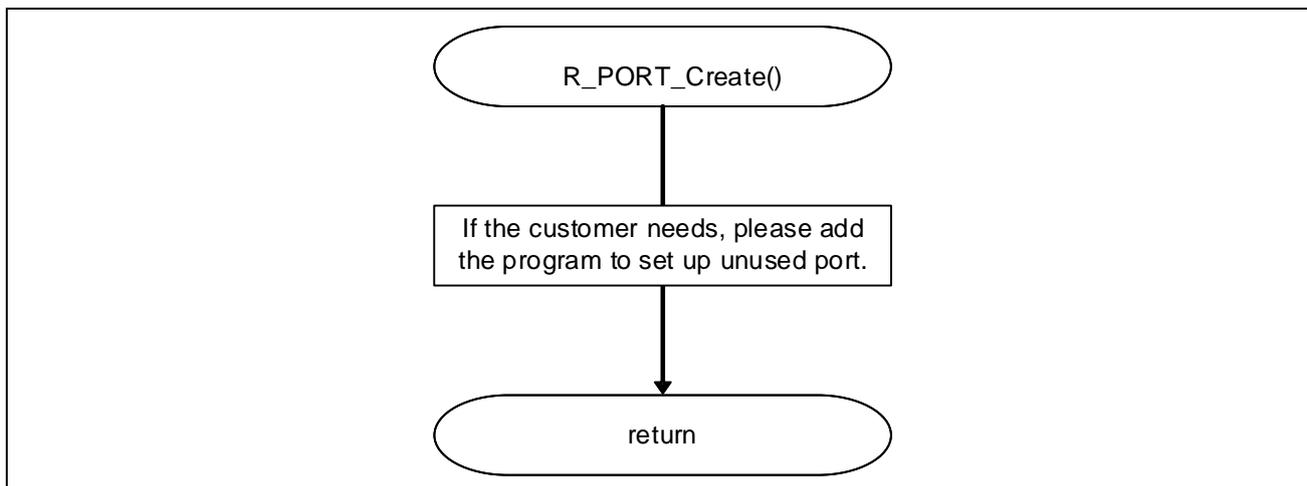


Figure 5.8 I/O Port Setup

Caution: Provide proper treatment for unused pins so that their electrical specifications are observed. Connect each of any unused input-only ports to V_{DD} or V_{SS} via a separate resistor.

5.4.6.6 Timer Array Unit Setup

Figures 5.9 and Table 5.10 show the flowchart for setting up the timer array unit.

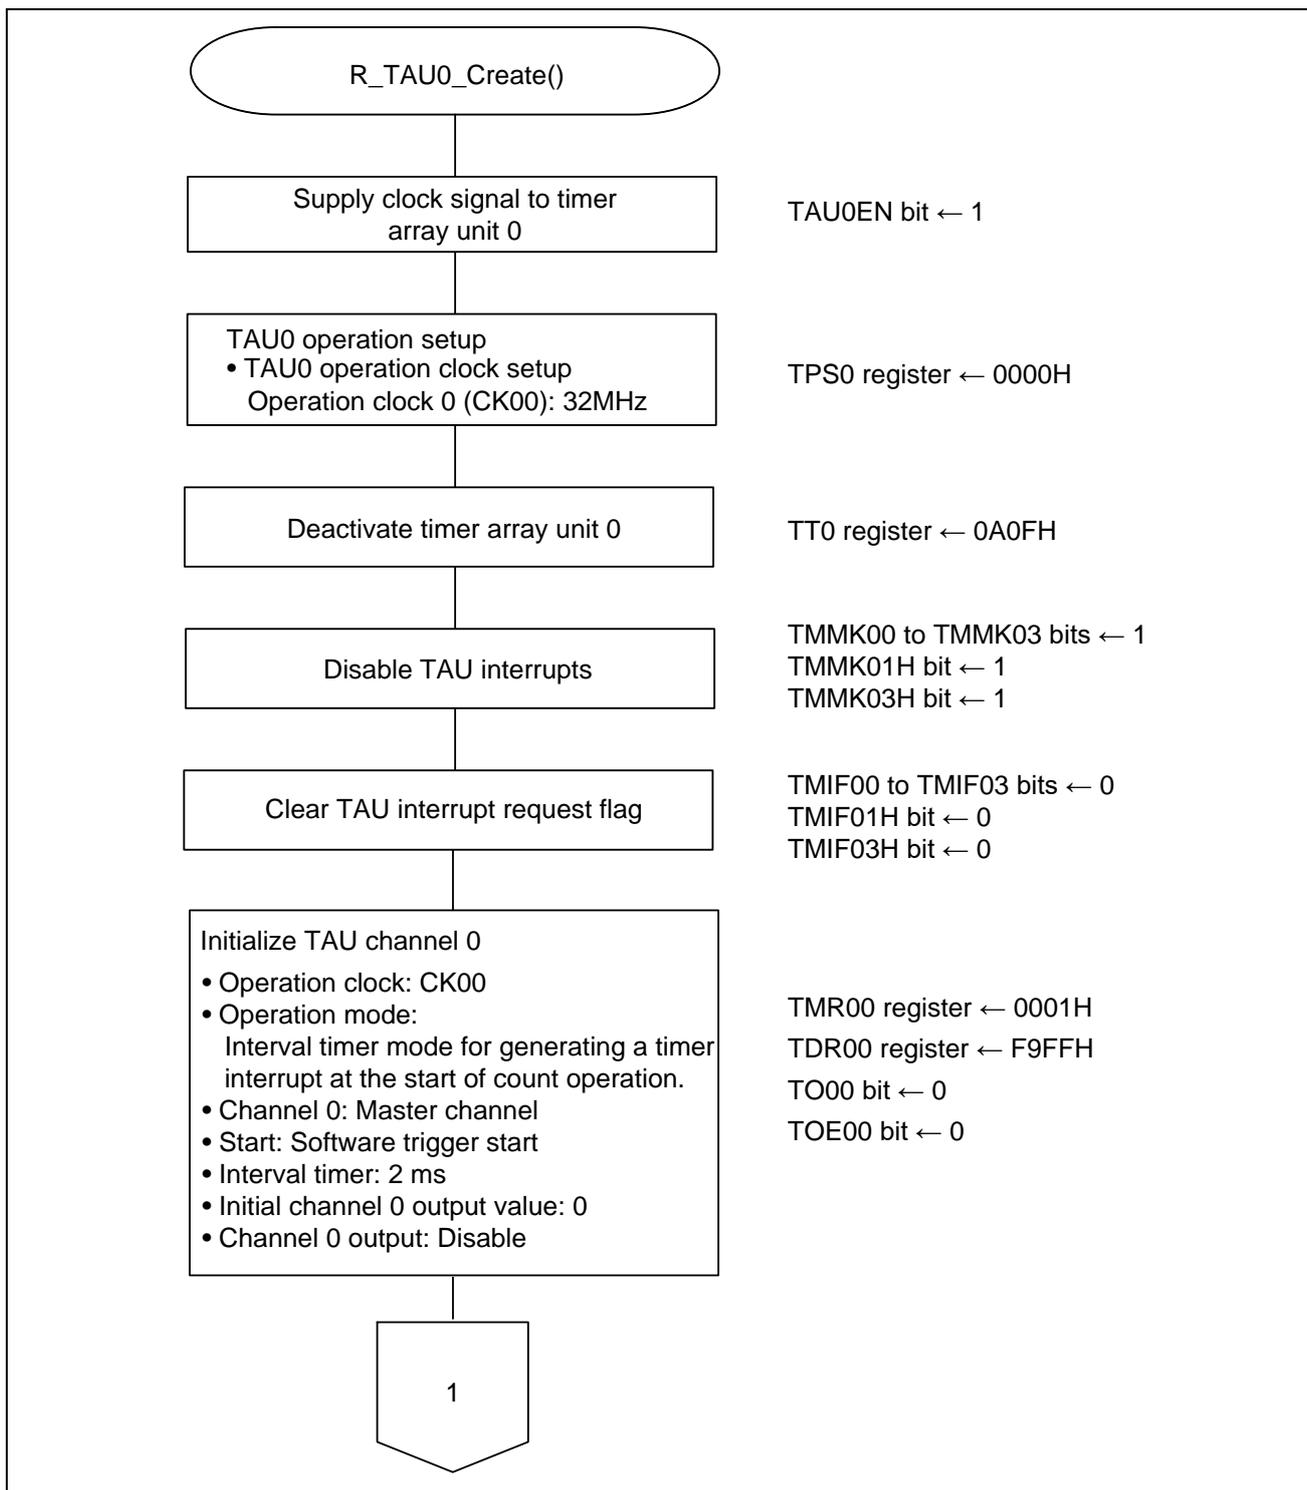


Figure 5.9 Timer Array Unit Setup (1/2)

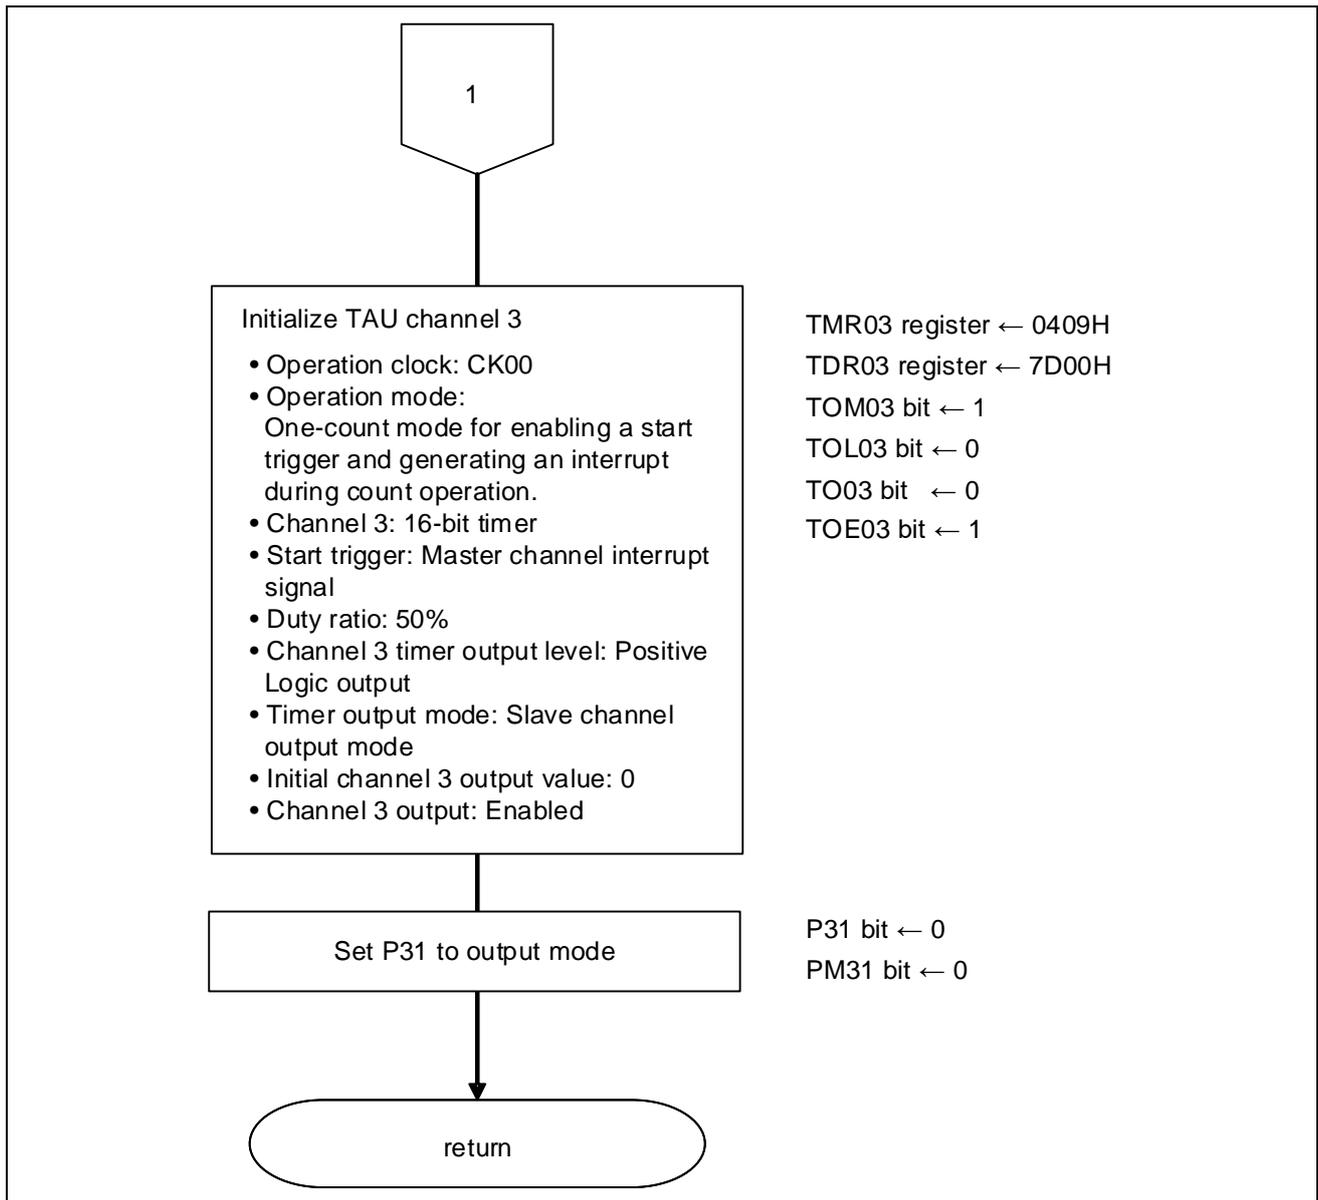


Figure 5.10 Timer Array Unit Setup (2/2)

RL78/G14, R8C/36M Group Migration Guide from R8C to RL78: Timer RF to Timer Array Unit

Starting clock signal supply to the timer array unit 0

- Peripheral enable register 0 (PER0)

Start clock signal supply to the timer array unit 0.

Symbol: PER0

7	6	5	4	3	2	1	0
RTCEN	IICA1EN	ADCEN	IICA0EN	SAU1EN	SAU0EN	TAU1EN	TAU0EN
x	x	x	x	x	x	x	1

Bit 0

TAU0EN	Control of timer array unit 0 input clock supply
0	Stops input clock supply
1	Enables input clock supply

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Configuring the timer clock frequency

- Timer clock select register 0 (TPS0)

Select an operation clock for timer array unit 0.

Symbol: TPS0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	PRS 031	PRS 030	0	0	PRS 021	PRS 020	PRS 013	PRS 012	PRS 011	PRS 010	PRS 003	PRS 002	PRS 001	PRS 000
0	0	x	x	0	0	x	x	x	x	x	x	0	0	0	0

Bits 3 to 0

PRS 003	PRS 002	PRS 001	PRS 000	Operation clock (CK00) selection					
					f _{CLK} = 2 MHz	f _{CLK} = 4 MHz	f _{CLK} = 8 MHz	f _{CLK} = 20 MHz	f _{CLK} = 32 MHz
0	0	0	0	f _{CLK}	2 MHz	4 MHz	8 MHz	20 MHz	32 MHz
0	0	0	1	f _{CLK} /2	1 MHz	2 MHz	4 MHz	10 MHz	16 MHz
0	0	1	0	f _{CLK} /2 ²	500 kHz	1 MHz	2 MHz	5 MHz	8 MHz
0	0	1	1	f _{CLK} /2 ³	250 kHz	500 kHz	1 MHz	2.5 MHz	4 MHz
0	1	0	0	f _{CLK} /2 ⁴	125 kHz	250 kHz	500 kHz	1.25 MHz	2 MHz
0	1	0	1	f _{CLK} /2 ⁵	62.5 kHz	125 kHz	250 kHz	625 kHz	1 MHz
0	1	1	0	f _{CLK} /2 ⁶	31.3 kHz	62.5 kHz	125 kHz	313 kHz	500 kHz
0	1	1	1	f _{CLK} /2 ⁷	15.6 kHz	31.3 kHz	62.5 kHz	156 kHz	250 kHz
1	0	0	0	f _{CLK} /2 ⁸	7.81 kHz	15.6 kHz	31.3 kHz	78.1 kHz	125 kHz
1	0	0	1	f _{CLK} /2 ⁹	3.91 kHz	7.81 kHz	15.6 kHz	39.1 kHz	62.5 kHz
1	0	1	0	f _{CLK} /2 ¹⁰	1.95 kHz	3.91 kHz	7.81 kHz	19.5 kHz	31.25 kHz
1	0	1	1	f _{CLK} /2 ¹¹	977 Hz	1.95 kHz	3.91 kHz	9.77 kHz	15.6 kHz
1	1	0	0	f _{CLK} /2 ¹²	488 Hz	977 Hz	1.95 kHz	4.88 kHz	7.81 kHz
1	1	0	1	f _{CLK} /2 ¹³	244 Hz	488 Hz	977 Hz	2.44 kHz	3.91 kHz
1	1	1	0	f _{CLK} /2 ¹⁴	122 Hz	244 Hz	488 Hz	1.22 kHz	1.95 kHz
1	1	1	1	f _{CLK} /2 ¹⁵	61.0 Hz	122 Hz	244 Hz	610 Hz	977 Hz

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Setting up the channel 0 operation mode

- Timer mode register 00 (TMR00)
 - Select an operation clock (f_{MCK}).
 - Select a count clock.
 - Select a start trigger and capture trigger.
 - Select a valid edge for timer input.
 - Set up the operation mode.

Symbol: TMR00

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
CKS001	CKS000	0	CCS00	0	STS002	STS001	STS000	CIS001	CIS000	0	0	MD003	MD002	MD001	MD000
0	0	0	0	0	0	0	0	x	x	0	0	0	0	0	1

Bits 15 and 14

CKS001	CKS000	Selection of operation clock (f_{MCK}) of channel 0
0	0	Operation clock CK00 set by timer clock select register 0 (TPS0)
0	1	Operation clock CK02 set by timer clock select register 0 (TPS0)
1	0	Operation clock CK01 set by timer clock select register 0 (TPS0)
1	1	Operation clock CK03 set by timer clock select register 0 (TPS0)

Bit 12

CCS00	Selection of count clock (f_{CLK}) of channel 0
0	Operation clock (f_{MCK}) specified by the CKS000 and CKS001 bits
1	Valid edge of input signal input from the TI00 pin

Bits 10 to 8

STS002	STS001	STS000	Setting of start trigger or capture trigger of channel 0
0	0	0	Only software trigger start is valid (other trigger sources are unselected).
0	0	1	Valid edge of the TI00 pin input is used as both the start trigger and capture trigger.
0	1	0	Both the edges of the TI00 pin input are used as a start trigger and a capture trigger.
1	0	0	Interrupt signal of the master channel is used (when the channel is used as a slave channel with the simultaneous channel operation function).
Other than above			Setting prohibited

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Symbol: TMR00

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
CKS001	CKS000	0	CCS00	0	STS002	STS001	STS000	CIS001	CIS000	0	0	MD003	MD002	MD001	MD000
0	0	0	0	0	0	0	0	x	x	0	0	0	0	0	1

Bits 3 to 0

MD003	MD002	MD001	MD000	Operation mode of channel 0	Corresponding function	Count operation of TCR
0	0	0	1/0	Interval timer mode	Interval timer / Square wave output / Divider function / PWM output (master)	Counting down
0	1	0	1/0	Capture mode	Input pulse interval measurement	Counting up
0	1	1	0	Event counter mode	External event counter	Counting down
1	0	0	1/0	One-count mode	Delay counter / One-shot pulse output / PWM output (slave)	Counting down
1	1	0	0	Capture & one-count mode	Measurement of high-/low-level width of input signal	Counting up
Other than above				Setting prohibited		

The operation of each mode varies depending on MD000 bit (see table below).

Operation mode (Value set by the MD003 to MD001 bits (see table above))	MD000	Setting of starting counting and interrupt
<ul style="list-style-type: none"> Interval timer mode (0, 0, 0) Capture mode (0, 1, 0) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either).
	1	Timer interrupt is generated when counting is started (timer output also changes).
<ul style="list-style-type: none"> Event counter mode (0, 1, 1) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either).
<ul style="list-style-type: none"> One-count mode (1, 0, 0) 	0	Start trigger is invalid during counting operation. At that time, interrupt is not generated.
	1	Start trigger is valid during counting operation. At that time, interrupt is also generated.
<ul style="list-style-type: none"> Capture & one-count mode (1, 1, 0) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either). Start trigger is invalid during counting operation. At that time interrupt is not generated.
Other than above		Setting prohibited

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Setting up the channel 3 operation mode

- Timer mode register 03 (TMR03)
 - Select an operation clock (f_{MCK}).
 - Select a count clock.
 - Select the 16/8-bit timer.
 - Select a start trigger and capture trigger.
 - Select a valid edge for timer input.
 - Set up the operation mode.

Symbol: TMR03

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
CKS	CKS	0	CCS	SPLIT	STS	STS	STS	CIS	CIS	0	0	MD	MD	MD	MD	
031	030		03	03	032	031	030	031	030			033	032	031	030	
0	0	0	0	0	1	0	0	x	x	0	0	1	0	0	1	

Bits 15 and 14

CKS031	CKS030	Selection of operation clock (f_{MCK}) of channel 3
0	0	Operation clock CK00 set by timer clock select register 0 (TPS0)
0	1	Operation clock CK02 set by timer clock select register 0 (TPS0)
1	0	Operation clock CK01 set by timer clock select register 0 (TPS0)
1	1	Operation clock CK03 set by timer clock select register 0 (TPS0)

Bit 12

CCS03	Selection of count clock (f_{CLK}) of channel 3
0	Operation clock (f_{MCK}) specified with the CKS030 and CKS031 bits
1	Valid edge of input signal input from the TI03 pin

Bit 11

SPLIT03	Selection of 8 or 16-bit timer operation for channel 3
0	Operates as 16-bit timer (Operates in independent channel operation function or as slave channel in simultaneous channel operation function.)
1	Operates as 8-bit timer

Bits 10 to 8

STS032	STS031	STS030	Setting of start trigger or capture trigger of channel 3
0	0	0	Only software trigger start is valid (other trigger sources are unselected).
0	0	1	Valid edge of the TI03 pin input is used as both the start trigger and capture trigger.
0	1	0	Both the edges of the TI03 pin input are used as a start trigger and a capture trigger.
1	0	0	Interrupt signal of the master channel is used (when the channel is used as a slave channel with the simultaneous channel operation function).
Others than above			Setting prohibited

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Symbol: TMR03

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
CKS031	CKS030	0	CCS03	SPLIT03	STS032	STS031	STS030	CIS031	CIS030	0	0	MD033	MD032	MD031	MD030
0	0	0	0	0	1	0	0	x	x	0	0	1	0	0	1

Bits 3 to 0

MD033	MD032	MD031	MD030	Operation mode of channel 3	Corresponding function	Count operation of TCR
0	0	0	1/0	Interval timer mode	Interval timer / Square wave output / Divider function / PWM output (master)	Counting down
0	1	0	1/0	Capture mode	Input pulse interval measurement	Counting up
0	1	1	0	Event counter mode	External event counter	Counting down
1	0	0	1/0	One-count mode	Delay counter / One-shot pulse output / PWM output (slave)	Counting down
1	1	0	0	Capture & one-count mode	Measurement of high-/low-level width of input signal	Counting up
Other than above				Setting prohibited		

The operation of each mode varies depending on MD030 bit (see table below).

Operation mode (Value set by the MD033 to MD031 bits (see table above))	MD030	Setting of starting counting and interrupt
<ul style="list-style-type: none"> Interval timer mode (0, 0, 0) Capture mode (0, 1, 0) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either).
	1	Timer interrupt is generated when counting is started (timer output also changes).
<ul style="list-style-type: none"> Event counter mode (0, 1, 1) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either).
<ul style="list-style-type: none"> One-count mode (1, 0, 0) 	0	Start trigger is invalid during counting operation. At that time, interrupt is not generated.
	1	Start trigger is valid during counting operation. At that time, interrupt is also generated.
<ul style="list-style-type: none"> Capture & one-count mode (1, 1, 0) 	0	Timer interrupt is not generated when counting is started (timer output does not change, either). Start trigger is invalid during counting operation. At that time interrupt is not generated.
Other than above		Setting prohibited

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Configuring the PWM output pulse cycle time

- Timer data register 00 (TDR00)

Configure the PWM output pulse cycle time.

Symbol: TDR00

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

$$\text{Pulse cycle time} = (\text{TDR00 setting} + 1) \times \text{Count clock cycle time}$$

$$2 \text{ [ms]} = (1/32[\text{MHz}]) \times (\text{TDR00 setting} + 1)$$

$$\Rightarrow \text{TDR00 setting} = 63999$$

Configuring the PWM output duty ratio

- Timer data register 03 (TDR03)

Configure the PWM output duty ratio.

Symbol: TDR03

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

$$\text{Duty ratio} = (\text{TDR03 setting}) / (\text{TDR00 setting} + 1) \times 100$$

$$50 \text{ [%]} = (\text{TDR03 setting}) / (63999 + 1) \times 100$$

$$\Rightarrow \text{TDR03 setting} = 32000$$

Setting up the timer output mode

- Timer output mode register 0 (TOM0)

Set up the timer output mode for each channel.

Symbol: TOM0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	TOM03	TOM02	TOM01	0
0	0	0	0	0	0	0	0	0	0	0	0	1	x	x	0

Bit 3

TOM03	Control of timer output mode of channel 3
0	Master channel output mode (to produce toggle output by timer interrupt request signal (INTTM03))
1	Slave channel output mode (output is set by the timer interrupt request signal (INTTM03) of the master channel, and reset by the timer interrupt request signal (INTTM0p) of the slave channel)

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

RL78/G14, R8C/36M Group Migration Guide from R8C to RL78: Timer RF to Timer Array Unit

Configuring the output level for the timer output pin

- Timer output level register 0 (TOL0)

Configure the output level for the timer output pin for each channel.

Symbol: TOL0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	TOL03	TOL02	TOL01	0
0	0	0	0	0	0	0	0	0	0	0	0	0	x	x	0

Bit 3

TOL03	Control of timer output level of channel 3
0	Positive logic output (active-high)
1	Negative logic output (active-low)

Configuring the output value for the timer output pin

- Timer output register 0 (TO0)

Configure the output value for the timer output pin for each channel.

Symbol: TO0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	TO03	TO02	TO01	TO00
0	0	0	0	0	0	0	0	0	0	0	0	0	x	x	0

Bit 3

TO03	Timer output of channel 3
0	Timer output value is "0"
1	Timer output value is "1"

Bit 0

TO00	Timer output of channel 0
0	Timer output value is "0"
1	Timer output value is "1"

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Enabling the timer output

- Timer output enable register 0 (TOE0)
Enable/disable the timer output for each channel.

Symbol: TOE0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	TOE03	TOE02	TOE01	TOE00
0	0	0	0	0	0	0	0	0	0	0	0	1	x	x	0

Bit 3

TOE03	Timer output enable/disable of channel 3
0	Timer output is disabled. Timer operation is not applied to the TO03 bit and the output is fixed. Writing to the TO03 bit is enabled and the level set in the TO03 bit is output from the TO03 pin.
1	Timer output is enabled. Timer operation is applied to the TO03 bit and an output waveform is generated. Writing to the TO03 bit is ignored.

Bit 0

TOE00	Timer output enable/disable of channel 0
0	Timer output is disabled. Timer operation is not applied to the TO00 bit and the output is fixed. Writing to the TO00 bit is enabled and the level set in the TO00 bit is output from the TO00 pin.
1	Timer output is enabled. Timer operation is applied to the TO00 bit and an output waveform is generated. Writing to the TO00 bit is ignored.

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

Setting up the PWM output pin

- Port register (P3)
Set the output latch.

Symbol: P3

7	6	5	4	3	2	1	0
0	0	0	0	0	0	P31	P30
0	0	0	0	0	0	0	x

Bit 1

P31	Output data control
0	Output 0
1	Output 1

- Port mode register (PM3)
Select the PM31 I/O mode.

Symbol: PM3

7	6	5	4	3	2	1	0
1	1	1	1	1	1	PM31	PM30
1	1	1	1	1	1	0	x

Bit 1

PM31	P31 pin I/O mode selection
0	Output mode (the pin functions as an output port (output buffer on))
1	Input mode (the pin functions as an input port (output buffer off))

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.
x: Bits not used in this setting item

5.4.6.7 Main Processing

Figure 5.11 shows the flowchart for main processing.

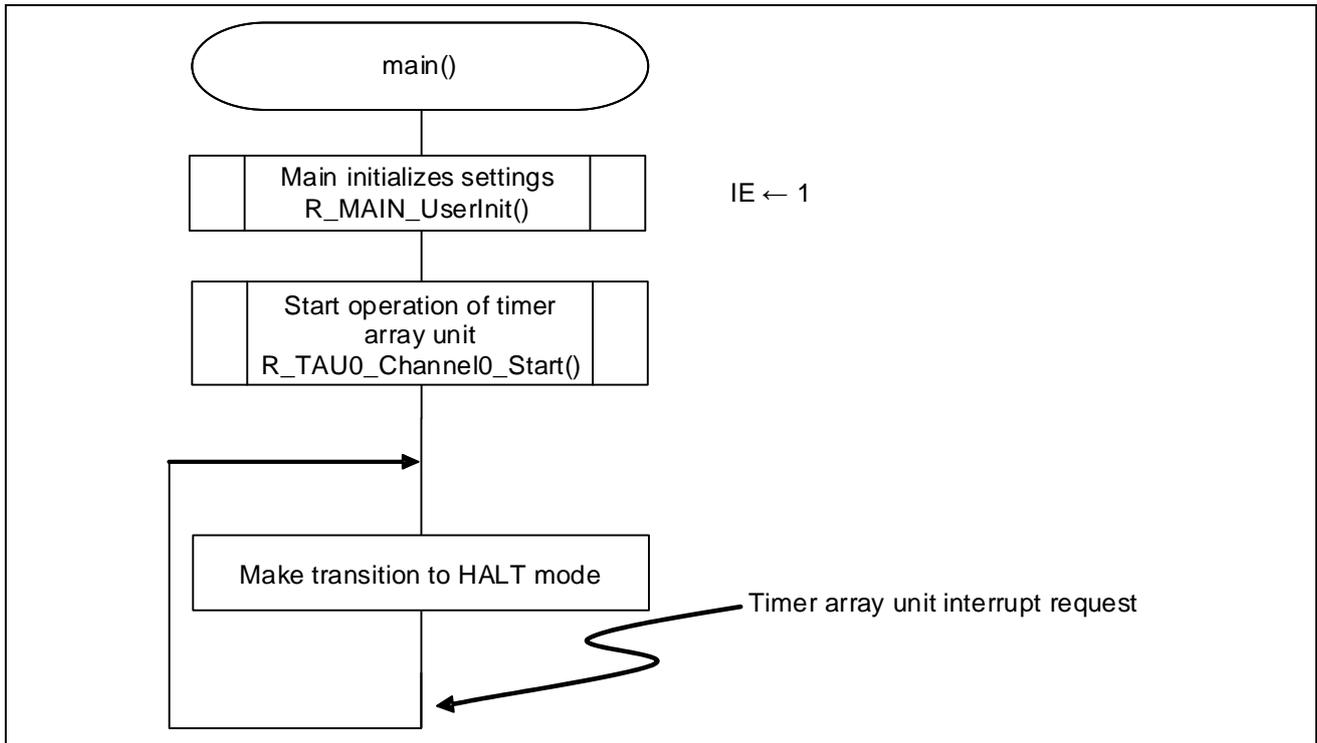


Figure 5.11 Main Processing

5.4.6.8 Timer Array Unit Startup

Figure 5.12 shows the flowchart for starting the operation of the timer array unit.

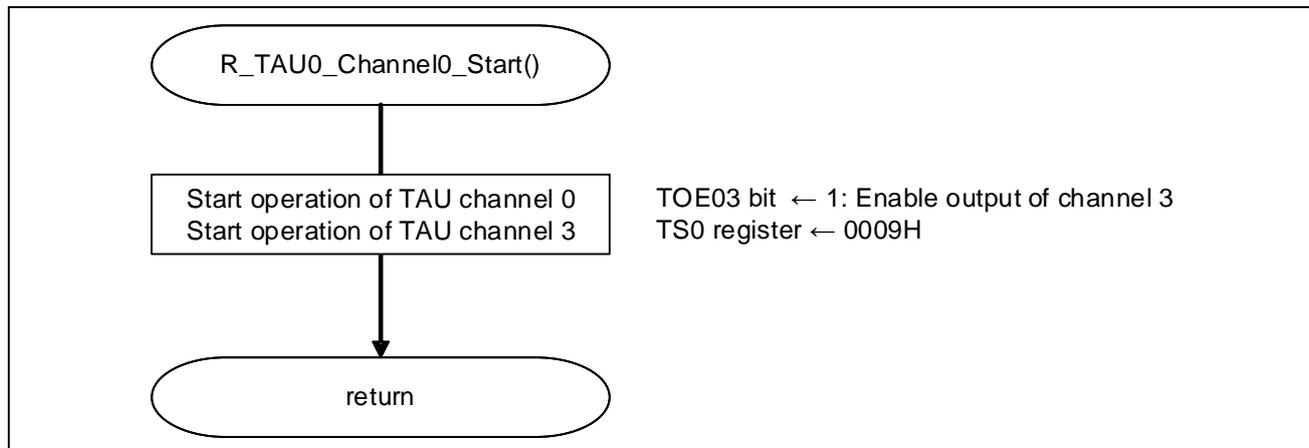


Figure 5.12 Timer Array Unit Startup

Enabling the timer output

- Timer output enable register 0 (TOE0)
Enable/disable the timer output for each channel.

Symbol: TOE0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	TOE03	TOE02	TOE01	TOE00
0	0	0	0	0	0	0	0	0	0	0	0	1	x	x	x

Bit 3

TOE03	Timer output enable/disable of channel 3
0	Timer output is disabled. Timer operation is not applied to the TO03 bit and the output is fixed. Writing to the TO03 bit is enabled and the level set in the TO03 bit is output from the TO03 pin.
1	Timer output is enabled. Timer operation is applied to the TO03 bit and an output waveform is generated. Writing to the TO03 bit is ignored.

Configuring the timer startup

- Timer channel start register 0 (TS0)
Enable count operation of channel 0 and channel 3.

Symbol: TS0

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	TSH03	0	TSH01	0	0	0	0	0	TS03	TS02	TS01	TS00
0	0	0	0	x	0	x	0	0	0	0	0	1	x	x	1

Bit 3

TS03	Operation enable (start) trigger of channel 3
0	No trigger operation
1	The TE03 bit is set to 1 and the count operation becomes enabled. The TCR03 register count operation start in the count operation enabled state varies depending on each operation mode.

Bit 0

TS00	Operation enable (start) trigger of channel 0
0	No trigger operation
1	The TE00 bit is set to 1 and the count operation becomes enabled. The TCR00 register count operation start in the count operation enabled state varies depending on each operation mode.

Caution: For details on the register setup procedures, refer to RL78/G14 User's Manual: Hardware.

x: Bits not used in this setting item

6. Sample Code

Sample code can be downloaded from the Renesas Electronics website.

7. Reference Application Note

RL78/G13 Timer Array Unit (Pulse Interval Measurement) CC-RL (R01AN2702)

The latest versions can be downloaded from the Renesas Electronics website.

8. Reference Documents

User's Manual: Hardware

RL78/G14 User's Manual: Hardware (R01UH0186)

R8C/36M Group User's Manual: Hardware (R01UH0259)

The latest versions can be downloaded from the Renesas Electronics website.

Technical Update/Technical News

The latest information can be downloaded from the Renesas Electronics website.

Website and Support

Renesas Electronics Website

<http://www.renesas.com/>

Inquiries

<http://www.renesas.com/contact/>

All trademarks and registered trademarks are the property of their respective owners.

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Aug. 1, 2017	-	First edition issued

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

- The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

- The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.
In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

- The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

- The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other disputes involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawing, chart, program, algorithm, application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics products.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.
Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (space and undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. When using the Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat radiation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions or failure or accident arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please ensure to implement safety measures to guard them against the possibility of bodily injury, injury or damage caused by fire, and social damage in the event of failure or malfunction of Renesas Electronics products, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures by your own responsibility as warranty for your products/system. Because the evaluation of microcomputer software alone is very difficult and not practical, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please investigate applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive carefully and sufficiently and use Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall not use Renesas Electronics products or technologies for (1) any purpose relating to the development, design, manufacture, use, stockpiling, etc., of weapons of mass destruction, such as nuclear weapons, chemical weapons, or biological weapons, or missiles (including unmanned aerial vehicles (UAVs)) for delivering such weapons, (2) any purpose relating to the development, design, manufacture, or use of conventional weapons, or (3) any other purpose of disturbing international peace and security, and you shall not sell, export, lease, transfer, or release Renesas Electronics products or technologies to any third party whether directly or indirectly with knowledge or reason to know that the third party or any other party will engage in the activities described above. When exporting, selling, transferring, etc., Renesas Electronics products or technologies, you shall comply with any applicable export control laws and regulations promulgated and administered by the governments of the countries asserting jurisdiction over the parties or transactions.
10. Please acknowledge and agree that you shall bear all the losses and damages which are incurred from the misuse or violation of the terms and conditions described in this document, including this notice, and hold Renesas Electronics harmless, if such misuse or violation results from your resale or making Renesas Electronics products available any third party.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.3.0-1 November 2016)



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Boume End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL II Stage, Indiranagar, Bangalore, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141